

**MITSUBISHI
ELECTRIC**

UNINTERRUPTIBLE POWER SUPPLY SYSTEM

MODEL

9800A SERIES

OWNERS / TECHNICAL MANUAL

(For parallel operation possible model only)

Preface

Revision 3.01 Sep. 16, 07
ALN-H0776

TABLE OF CONTENTS

LIST OF TABLES	ii
LIST OF FIGURES	iii
HOW TO USE THIS MANUAL	iv
1.0 INTRODUCTION	1-1
1.1 SAFETY PRECAUTION	1-2
1.2 GENERAL	1-5
1.3 DEFINITIONS	1-6
1.4 OPERATION OVERVIEW	1-7
1.5 SPECIFICATIONS	1-15
2.0 OPERATION CONTROLS AND INDICATORS	2-1
2.1 LED DISPLAY	2-2
2.2 EPO BUTTON	2-2
2.3 LIQUID CRYSTAL DISPLAY	2-3
2.4 EXTERNAL SIGNAL TERMINAL BLOCK	2-8
2.5 EXTERNAL COMMUNICATION CONNECTOR	2-12
3.0 INSTALLATION AND OPERATION	3-1
3.1 TRANSPORTATION AND INSTALLATION	3-1
3.2 INSTALLATION PROCEDURE	3-1
3.3 PROCEDURE FOR CABLE CONNECTIONS	3-2
3.4 OPERATING PROCEDURES	3-24
4.0 RESPONSE TO UPS FAILURE	4-1
5.0 PARTS REPLACEMENT	5-1
6.0 FAULT CODES	6-1
7.0 WARRANTY & OUT OF WARRANTY SERVICE	7-1

LIST OF TABLES

Table 1.1	UPS Installation Environment.....	1-2
Table 1.2	Rating of Bypass Input Circuit Breaker	1-4
Table 1.3	Power Specifications	1-15
Table 1.4	UPS Module Information.....	1-15
Table 1.5	Detail of Specifications	1-16
Table 1.6	Rating of Contactor and Fuses.....	1-17
Table 3.1	How to Transport and Install the System	3-1
Table 3.2	List of UPS Weights (lb.).....	3-1
Table 3.3	Maximum Permitted Fault Current.....	3-2
Table 3.4	Recommended Cable Sizes	3-5
Table 3.5	Crimp Type Compression Lug.....	3-6
Table 6.1	Fault Code	6-2

LIST OF FIGURES

Figure 1.1	Single Line Diagram-Normal Operation	1-5
Figure 1.2	Single Line Diagram-Bypass Operation	1-6
Figure 1.3	Single Line Diagram-Battery Operation.....	1-7
Figure 1.4	UPS Parts Location	1-8
Figure 1.5	UPS Parts Location (Continued)	1-11
Figure 1.6	External I/F circuit PCB IOAU-04	1-11
Figure 2.1	Operation/Display Panel	2-1
Figure 2.2	Main Screen.....	2-3
Figure 2.3	Start/Stop Screen.....	2-4
Figure 2.4	PIN Protection Screen	2-4
Figure 2.5	Bypass Voltage Abnormal Message Screen	2-4
Figure 2.6	Measurement Screen	2-4
Figure 2.7	Setup Screen	2-5
Figure 2.8	Log Select Screen.....	2-5
Figure 2.9	Event Log Screen	2-5
Figure 2.10	Battery Log Screen	2-6
Figure 2.11	Main Screen (Battery Operation)	2-6
Figure 2.12	Measurement Screen (Battery Operation)	2-6
Figure 2.13	Main Screen (Fault Indication)	2-7
Figure 2.14	Message Screen	2-7
Figure 2.15	External Signal Terminal Block.....	2-8
Figure 2.16	Control Wiring for External Contacts	2-10
Figure 2.17	Remote "Start" Contact Connections	2-11
Figure 2.18	External communication connector	2-12
Figure 3.1	UPS Terminal Designation	3-6
Figure 3.2	Diagram of input/output bus bars and terminal blocks	3-7
Figure 3.3	Diagram of Rectifier Cabinet & Inverter Cabinet Inter-connect	3-19
Figure 3.4	Diagram of Power and Control Wire Connect (Parallel Connection)	3-21
Figure 3.5	Operation Procedures: Start Up/Shut Down Procedure.....	3-24

HOW TO USE THIS MANUAL

This manual is designed for ease of use, giving the user easy and quick reference to information.

This manual uses notice icons to draw attention to the user important information regarding the safe operation and installation of the UPS. The notice icons used in this manual are explained below, and should be taken into account and adhered to whenever they appear in the text of this manual.



Warning: A warning notice icon conveys information provided to protect the user and service personnel against hazards and/or possible equipment damage.



Caution: A caution notice icon conveys information provided to protect the user and service personnel against possible equipment damage.



Note: A Note notice icon indicates when the user should make a reference of information regarding the UPS operation, load status and display status. Such information is essential if Mitsubishi field service group assistance and correspondence is required.

Safety Recommendations: If any problems are encountered while following this manual, Mitsubishi field service group assistance and correspondence is recommended.

1.0 INTRODUCTION

Your Mitsubishi Uninterruptible Power Supply System (UPS) is designed to provide many years of reliable protection from power failure, brown-outs, line noise, and voltage transients. To ensure optimum performance of the equipment, follow the manufacturer's instructions. This manual contains descriptions required to operate the UPS. Please read this manual carefully and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS
SAVE THESE INSTRUCTIONS



This manual contains important instructions for the 9800A SERIES Uninterruptible Power Supply Systems that should be followed during installation and maintenance of the UPS and batteries.

WARNING 1



Lethal voltages exist within the equipment during operation. Observe all warning and cautions in this manual. Failure to comply may result in serious injury or death. Obtain qualified service for this equipment as instructed.

WARNING 2

In no event will MITSUBISHI be responsible or liable for either indirect or consequential damage or injury that may come from the use of this equipment.

Any modifications without authorization by MITSUBISHI could result in personal injuries, death or destruction of the UPS.

1.1 SAFETY PRECAUTIONS

APPLICATION

This UPS shall NOT be applied to support equipment (*) that could affect the human lives.

Special considerations are required when applying this UPS to the equipment (**) that affect human safety and/or maintain public services.

Be sure to contact/inform MITSUBISHI if it is such a case. The application without special consideration may cause serious accidents.

- *
 - Medical operation room equipment
 - Life support equipment (artificial dialysis, incubators, etc.)
 - Toxic gas or smoke eliminators
 - Equipment that must be provided under fire laws, construction standards or other ordinances
 - Equipment equivalent to the above

- **
 - Equipment to supervise or control airways, railways, roads, sea-lanes or other transportation.
 - Equipment in nuclear power plants.
 - Equipment to control communications.
 - Equipment equivalent/similar to the above mentioned.

WARNING 3


The UPS is to be installed in a controlled environment.

Improper storage and installation environment may deteriorate insulation, shorten component life and cause malfunctions.

Keep the installation environment per standard described as follows:

TABLE 1.1 UPS Installation Environment

No.	Item	Environment standard	
1	Installation location	Indoors	
2	Ambient temperature	Minimum temperature: 32°F(0°C), Maximum temperature: 104°F(40°C) The average temperature over any 24-hour period must be in the range 41° F (5°C) to 95°F(35°C).	
3	Relative humidity	The relative humidity must be held between 5 and 95%. There must be no condensation due to temperature changes.	
4	Altitude	This equipment must not be applied at altitude that exceeds 2743m(9000ft) above seal level.	
5	Dust	Dust in the room where the UPS is installed must not exceed normal atmospheric dust levels. In particular, that dust should not include iron particles, oils or fats, or organic materials such as silicone.	
6	Inflammable gas	There should be no inflammable/explosive gas.	
		Hydrogen sulfide (H ₂ S)	No more than 0.0001 PPM
		Sulfurous acid gas (SO ₂)	No more than 0.05 PPM
		Chlorine gas (Cl ₂)	No more than 0.002 PPM
		Ammonia gas (NH ₃)	No more than 0.1 PPM
		Nitrous acid gas (NO ₂)	No more than 0.02 PPM
		Nitrous oxides (NO _x)	No more than 0.02 PPM
		Ozone (O ₃)	No more than 0.002 PPM
		Hydrochloric acid mist (HCl)	No more than 0.1 mg/m ³

WARNING 4


This UPS does not include a Bypass input circuit breaker (MCCB) to protect bypass circuit. The Bypass input circuit breaker (MCCB) is to be field supplied and installed. Recommended Breaker (MCCB)'s Specifications are as follows:

TABLE 1.2 Rating of Bypass Input Circuit Breaker

Capacity (kVA)	Bypass Voltage (Vac)	Bypass Rating (Aac)	Breaker (A)
100	480	120	150
	600	96	125
150	480	180	225
	600	144	200
225	480	271	350
	600	217	300
300	480	361	500
	600	289	400
375	480	451	600
	600	361	500
500	480	602	800
	600	482	600
750	480	902	1200
	600	722	900

AC input and AC output overcurrent protection and disconnect devices shall be field supplied and installed. The DC output breaker (MCCB) shall be field supplied and installed. The overcurrent protection device should be installed in the Battery cabinet and rated as indicated in TABLE 1.6.

1.2 GENERAL

The Mitsubishi 9800A SERIES UPS is designed to provide continuous and clean electrical power to a critical load. Additionally the UPS monitors power conditions affecting the load. In the event of an input power failure, the UPS will supply power to the critical load for the specified battery time.

If the input power is not restored promptly, back up power from the UPS battery permits the orderly shutdown of equipment supported by the UPS. The UPS is simple to start-up, operate and maintain.

The 9800A SERIES UPS is available in seven kVA sizes-100, 150, 225, 300, 375, 500 and 750kVA. Specifications for each kVA model appear in Section 1.5. The principles of operation described herein are applicable to all models.

This manual provides an overview of the 9800A SERIES components and their functions. The appearance and purpose of operator controls and indicators is described with procedures for operation, start-up, shutdown and basic maintenance included.

1.3 DEFINITIONS

UNINTERRUPTIBLE POWER SUPPLY SYSTEM (UPS) - All components within the UPS Module Cabinet and associated batteries that function as a system to provide continuous, conditioned AC power to a load. This is sometimes referred to as the "System".

UPS MODULE CABINET - The metal enclosure which contains the Rectifier, the Inverter, the Chopper, the Static Transfer Switch, the Internal Bypass line, the operator controls, and the internal control system required to provide specified AC power to a load.

UPS MODULE - The Rectifier and Inverter assemblies which, under the direction of the internal control system and operator controls, provide specified AC power to a load.

RECTIFIER - The UPS components which contain the equipment and controls necessary to convert input AC power to regulated DC power required for battery charging and for supplying power to the Inverter.

INVERTER - The UPS components which contain the equipment and controls necessary to convert DC power from the Rectifier, or the battery, to AC power required by the critical load.

CHOPPER - The UPS components which contain the equipment and controls necessary to charge the battery and supply power to the Inverter from battery.

STATIC TRANSFER SWITCH - The device which connects the critical load to the bypass line when the UPS module cannot supply continuous power.

BYPASS LINE - The line which conducts electricity directly from the input power source to the critical load during Maintenance or whenever the UPS is not completely operational.

INPUT POWER - Power provided by the electrical utility company, or auxiliary generator, which is connected to the UPS for supplying the critical load.

1.4 OPERATION OVERVIEW


The UPS provides two power paths between the utility source and the critical load.

Figure 1.1 shows the path for normal operation, with the load powered from the inverter.

Figure 1.2 shows the path for bypass operation, with the load supplied through the static bypass line.

A) Normal operation: Load power supplied by each system UPS inverter.

Figure 1.1 Single Line Diagram - Normal Operation: Load powered by UPS inverters

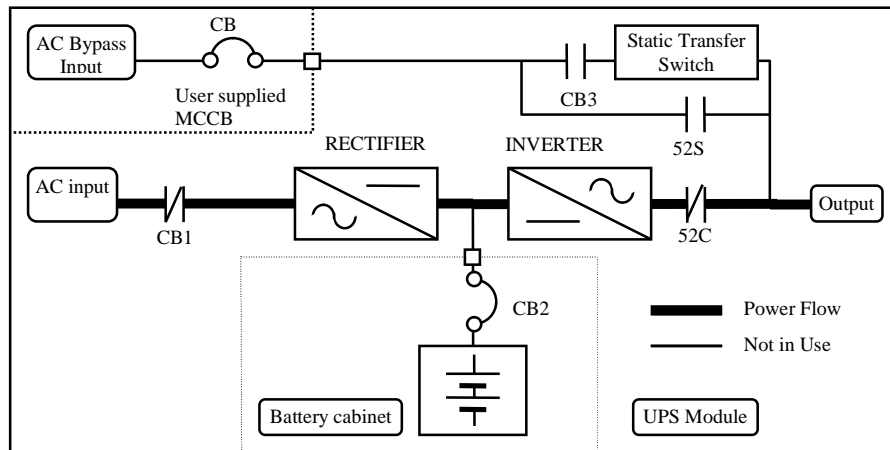

During normal operation, the path through the UPS inverters is used to power the load.

Referring to Figure 1.1: For each system UPS, the Input AC power is converted to DC by the Rectifier. DC power is utilized to charge the UPS battery and to provide power to the Inverter. The Inverter converts the DC power to clean AC power to supply the critical load.

The conversion - inversion process eliminates any voltage transients or fluctuations existing in the input power before it reaches the critical load.

The power drawn by the critical load is equally shared between all system UPS.

In the event of a UPS module failure, the critical load power will be continually supplied and shared by all other system UPS.


In the event of a load overcurrent, all system UPS will transfer to bypass without interruption to the critical load.



The Bypass Input circuit breaker (MCCB) for protection of the UPS and cables are field supplied and field installed. (See WARNING 4 on page 1-4)

B) Bypass Operation: Load Power supplied through each system UPS internal static bypass line.

FIGURE 1.2 Single Line Diagram - Bypass Operation: Load fed through Internal static bypass line.

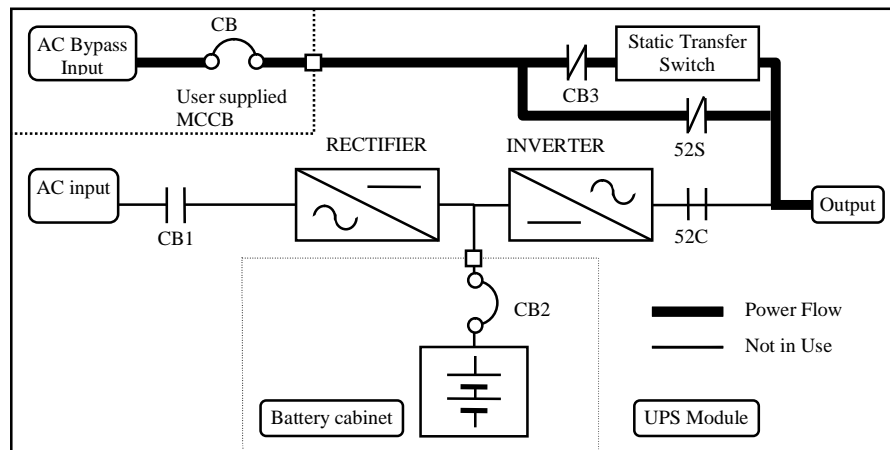

Referring to Figure 1.2: The Internal Static Bypass line is a Hard wired line through CB3 and contactor 52S which supplies the critical load with unconditioned input power.

Each system UPS internal static bypass line will equally share the power supplied to the critical load.


The internal static bypass line will route power to the critical load while the UPS module is de-energized during Start-up and before the system is fully operational.

Bypass operation will occur In the event of a load overcurrent, with all system UPS transferring to bypass without interruption to the critical load.

The internal control system determines the operation of the two paths, with the load powered from the inverter being the normal operation.

C) Battery operation: Load Power supplied by each system UPS battery and inverter.

FIGURE 1.3 Single Line Diagram - Battery Operation

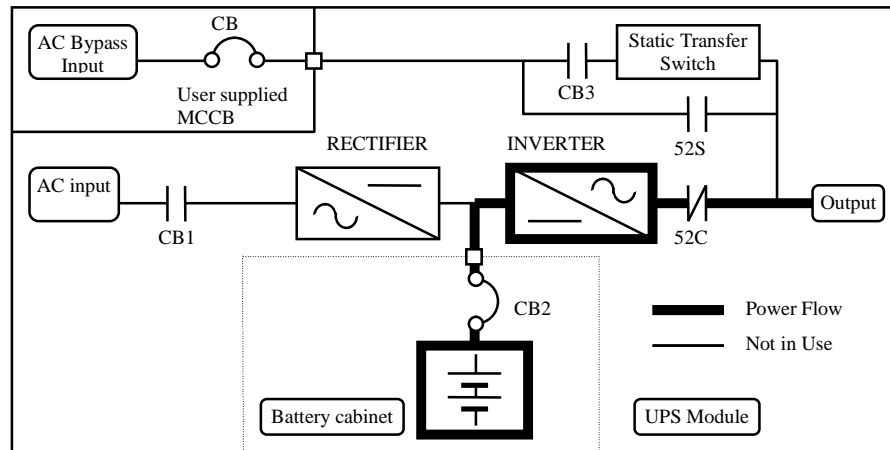

Referring to Figure 1.3: In the event of AC input source failure or interruption, each system UPS rectifier will de-energize and each UPS battery will immediately discharge and supply DC power to the Inverter to maintain continuous AC power to the load. This operation will continue until:

- a) The battery capacity expires and the inverter turns off, or
- b) Input power is restored after which the rectifier will power the inverter and critical load and simultaneously recharge the batteries.

A fully charged battery will provide power for the specified time at the rated load, or longer, at a reduced load.

When power is restored after a low battery shutdown, each system UPS Rectifier automatically restarts operation, recharges the batteries and the Inverter is automatically restarted without operator intervention. Load is automatically assumed by the inverter without operator intervention.

The power drawn by the load is equally shared between all system UPS during battery operation.

FIGURE 1.4-a UPS Parts Location (100kVA, 150kVA, 225kVA)

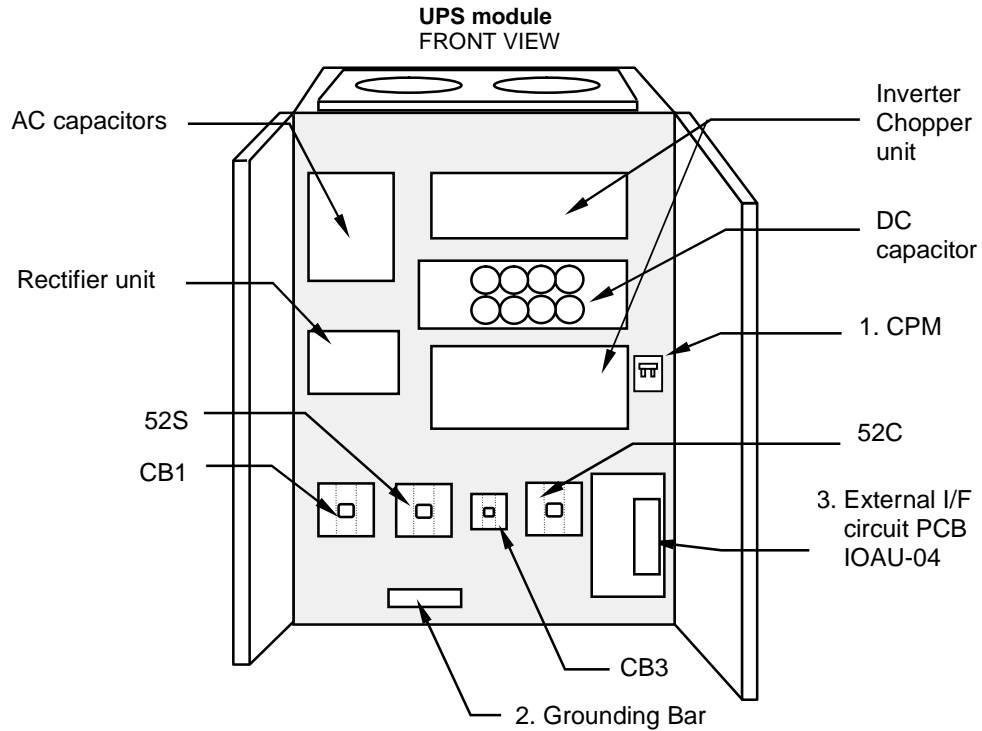


FIGURE 1.4-b UPS Parts Location (300kVA,375kVA)

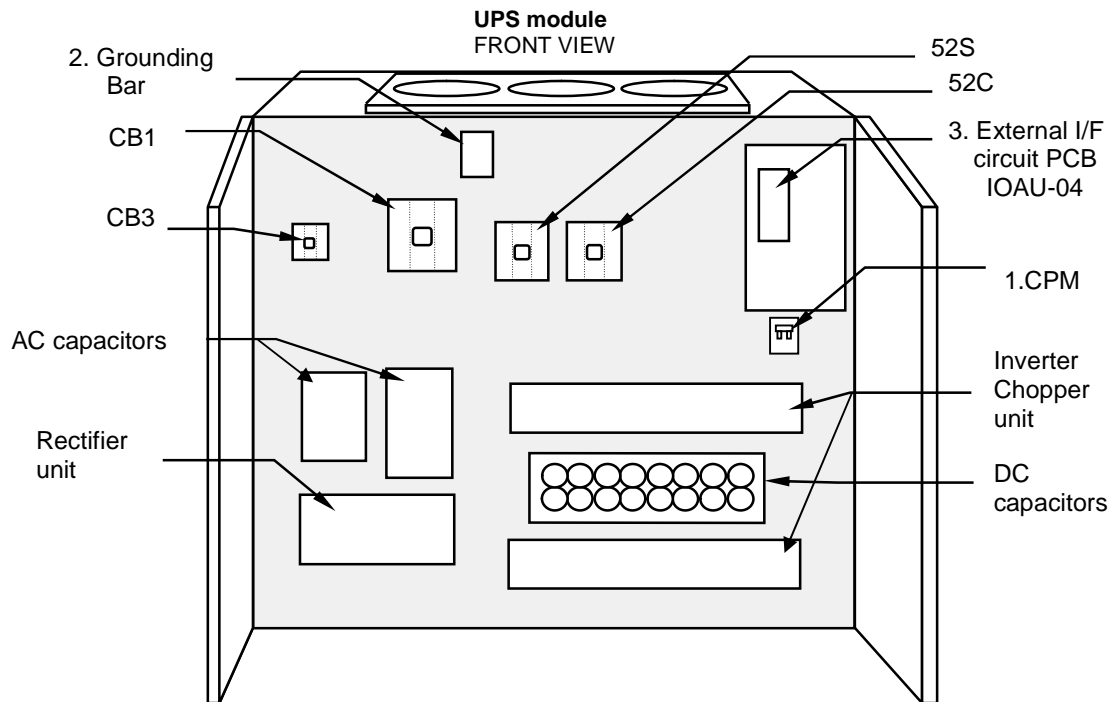


FIGURE 1.4-c UPS Parts Location (500kVA)


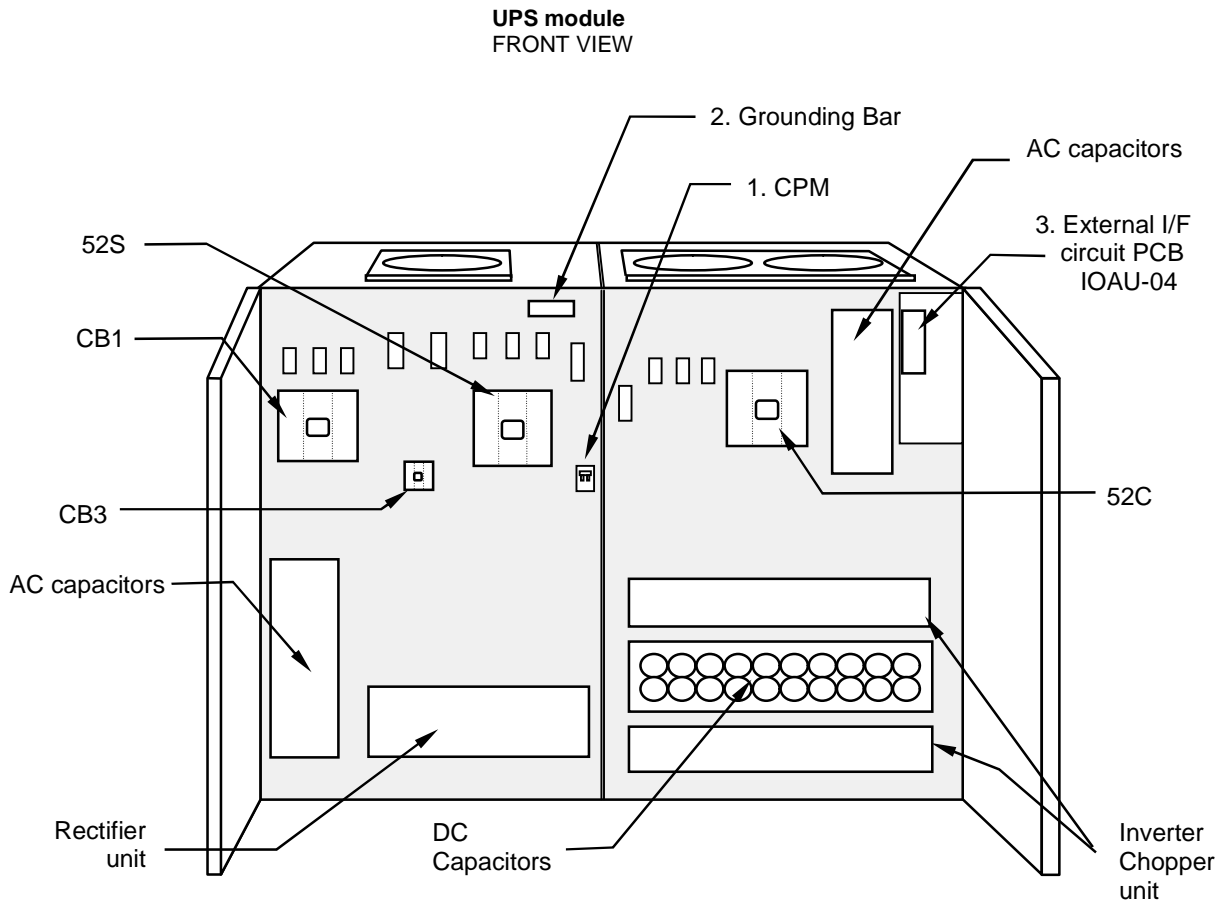


FIGURE 1.4-d UPS Parts Location (750kVA)

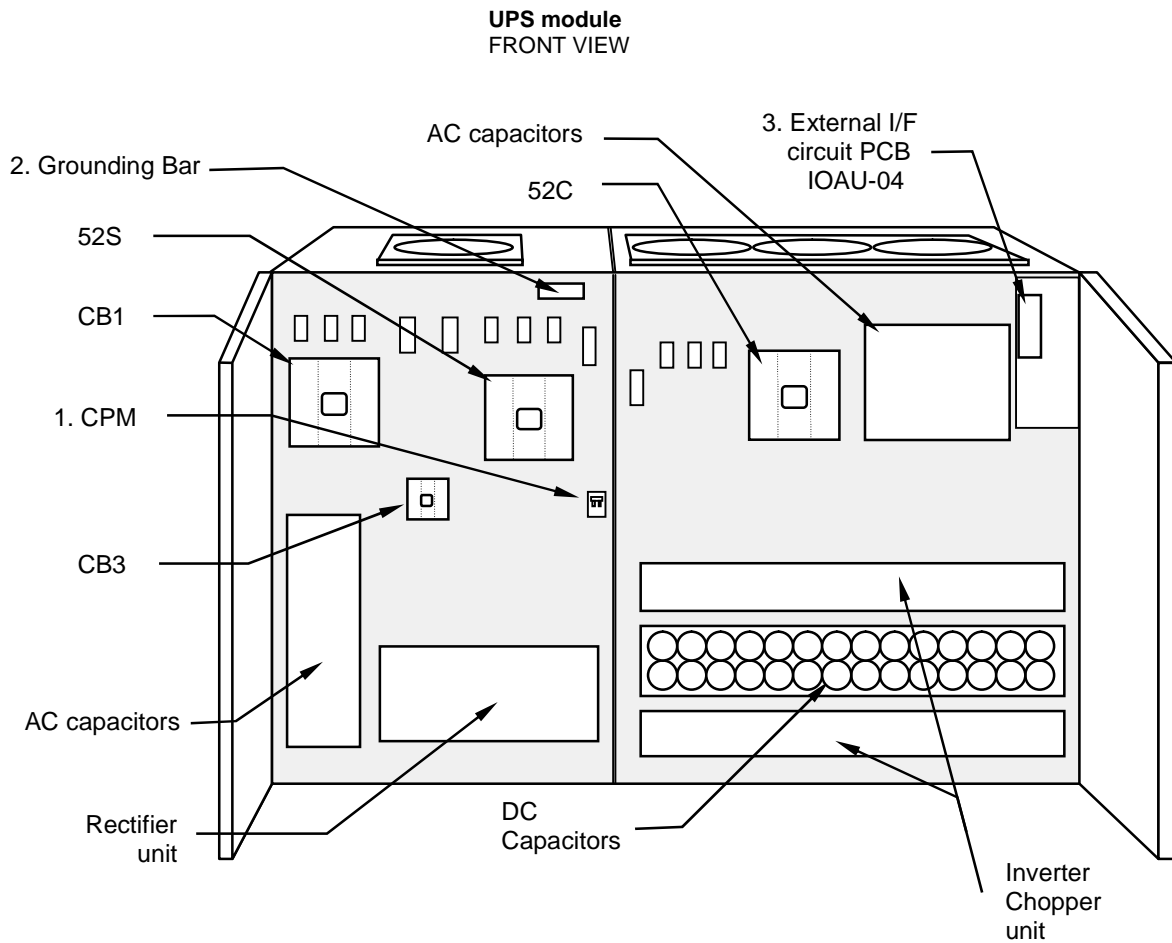

Description of Figures 1.4, 1.5, and 1.6:

1. **CPM** - Circuit protector for control power supply.
2. **Grounding bar (G)**
3. **External contact signal terminal block** (FIGURE 1.6) - Terminal block to connect contact signal input/output lines to and from the external devices. Refer to Figure 2.15 section 2.4 for details.
4. **RS232C communication connector** (FIGURE 1.6) - Refer to Figure 2.18 section 2.5 for details.
5. **Inverter start switch** - This switch is used to transfer the UPS from static bypass to inverter during maintenance purposes. Transfers will lock-out if the bypass voltage is more than +12%,-12% of nominal.
** Uninterrupted switching is made at the time of synchronous operation. Switching is impossible at the time of asynchronous operation.*
6. **“INVERTER STOP” switch** - This switch is used to transfer the UPS from inverter to static bypass during maintenance purposes. Do not operate it under normal operation. Transfers will lock-out if the bypass voltage is more than +12%,-12% of nominal.
** Uninterrupted switching is made at the time of synchronous operation. Switching is impossible at the time of asynchronous operation.*
7. **“FAULT RESET” switch (FOR SERVICE PERSONNEL ONLY)** - This switch resets errors resulting from alarm conditions. (Do not operate this switch while inverter and converter are in operation.)
8. **Maintenance (Set) button (FOR SERVICE PERSONNEL ONLY)** - This switch sets the UPS menu parameters.
9. **“Test mode” switch (FOR SERVICE PERSONNEL ONLY)** - This switch changes system operation to the test-mode. (This switch should not be operated by personnel other than an Authorized Service Engineer).
10. **“BOOT” switch (FOR SERVICE PERSONNEL ONLY)** - This switch boots the processor in the main control circuit resulting from alarm conditions. (Do not operate this switch while inverter and converter are in operation).

1.5 SPECIFICATIONS

The UPS name plate displays the rated kVA as well as nominal voltages and currents. The name plate is located on the inside of the UPS front door.

TABLE 1.3 Power Specifications

Rated output Power	Input voltage 3 phase / 3 wire	Bypass input voltage 3 phase / 4 wire	Output voltage 3 phase / 3 or 4 wire
100kVA / 80kW	480V	480V or 600V	480V or 600V
150kVA / 120kW	480V	480V or 600V	480V or 600V
225kVA / 180kW	480V	480V or 600V	480V or 600V
300kVA / 270kW	480V	480V or 600V	480V or 600V
375kVA / 338kW	480V	480V or 600V	480V or 600V
500kVA / 450kW	480V	480V or 600V	480V or 600V
750kVA / 675kW	480V	480V or 600V	480V or 600V

TABLE 1.4 UPS Module Information

UPS [kVA]	Cable Entry	Width [in / mm]	Depth [in / mm]	Height [in / mm]	Weight [lb./ kg]	Heating [kBTH / h]
100	BOTTOM	43.3 / 1100	29.8 / 758	79.7 / 2025	2061 / 935	19
150	BOTTOM	47.2 / 1200	29.8 / 758	79.7 / 2025	2579 / 1170	28
225	BOTTOM	55.1 / 1400	29.8 / 758	79.7 / 2025	3263 / 1480	43
300	TOP	76.8 / 1950	37.7 / 958	79.7 / 2025	4564 / 2070	59
375	TOP	76.8 / 1950	37.7 / 958	79.7 / 2025	4916 / 2230	73
500	TOP	114.2 / 2900	37.7 / 958	79.7 / 2025	6923 / 3140	89
750	TOP	129.9 / 3300	49.5 / 1258	79.7 / 2025	9193 / 4170	134

TABLE 1.5 Detail of Specifications

Rated Output kVA	100	150	225	300	375	500	750
Rated Output kW	80	120	180	270	338	450	675
AC INPUT							
Configuration	3 phase, 3 wire						
Voltage	277/480 V, 346/600 V +15% to -15%						
Frequency	60 Hz +/-5%						
Reflected Current THD	6% max. at 100% load; 9% max. at 50% load						
STATIC BYPASS INPUT							
Configuration	3 phase, 4 wire						
Voltage	277/480 V, 346/600 V +/-10%						
Frequency	60 Hz						
BATTERY							
Type	Lead Acid						
Ride Through	Application Specific						
Nominal Voltage	480 Vdc						
Minimum Voltage	400 Vdc						
Number of Cells	240						
AC OUTPUT							
Configuration	3 phase, 4 wire						
Voltage	277/480 V, 346/600 V						
Voltage Stability	+/-1%						
Frequency	60 Hz						
Frequency Stability	+/-0.05% in free running mode						
Power Factor	0.8 nominal			0.9 nominal			
Power Factor range	0.8 to 1.0 lagging (within output kW rating)						
Voltage THD	2% maximum THD at 100% Linear Load 5% maximum THD at 100% non-linear load						
Transient Response	+/-2% maximum at 100% load step +/-1% maximum at loss/return of AC power +/-5% maximum at load transfer to/from static bypass						
Transient Recovery	Less than 20ms						
Voltage Unbalance	1% maximum at 100% unbalanced load						
Phase Displacement	1deg. maximum at 100% load						
Inverter Overload	125% for 10 minutes; 150% for 1 minute						
System Overload	1000% for 1 cycle (with bypass available)			500% for 1 cycle (with bypass available)			
Bypass Overload	125% for 10 minutes						
Withstand Rating	65kA* * : with optional fuse						
ENVIRONMENTAL							
Cooling	Forced Air						
Operating Temperature	32° F to 104° F (0° C to 40° C). Recommended : 68° F to 86° F (20° C to 30° C)						
Relative Humidity	5% ~ 95% Non Condensing						
Altitude	0 to 9000 feet No Derating						
Location	Indoor (free from corrosive gases and dust)						
Paint Color	Munsell 5Y7/1 (Beige)						

TABLE 1.6 Rating of Contactors and Fuses

	NUMBER	APPLICATION	OUTPUT CAPACITY OF EQUIPMENT													
			100kVA		150kVA		225kVA		300kVA		375kVA		500kVA		750kVA	
			480V	600V	480V	600V	480V	600V	480V	600V	480V	600V	480V	600V	480V	600V
Contactor, Breaker	CB1	AC input contactor	135A		200A		350A		450A		660A		660A		910A	
	CB2	Battery disconnect breaker	225A		350A		500A		700A		900A		1200A		2000A	
	CB3	STS contactor	135A												260A	
	52C	Inverter output contactor	135A		200A		350A		450A		450A		660A		910A	
	52S	Bypass contactor	135A		200A		350A		450A		450A		660A		910A	
	88RC	Control circuit contactor	90A													
Fuses	FCU, FCV, FCW	AC input fuse	200A-690V		250A-690V						315A-690V					
	FDU,FDV,FDW FDX,FDY,FDZ FDP,FDN	DC arm fuse	450A-690V		450A-690V		630A-690V		900A-550V		900A-550V		630A-690V		900A-550V	
	FUA, FUB, FUC	Control power fuse	30A-600V													
	(OPTION) FSU, FSV, FSW	Bypass input fuse	200A-690V	-	315A-690V	-	250A-690V	-	250A-690V	-	315A-690V	-	315A-690V	-	315A-690V	-
	FZS1, 2, 3	Bypass input ZNR fuse	5A- 500V													
	FBS1, 2, 3	Control power fuse	10A-600V													
	FZR1, 2, 3	AC input ZNR fuse	5A- 500V													
	FPU, FPV, FPW	Parallel control circuit fuse	3A- 600V													


**Rating would be changed.*

2.0 OPERATOR CONTROLS AND INDICATORS

The 9800A Series operator controls and indicators are located as follows:

- Circuit breakers and contactors: Inside the module
- UPS status indicators: Outside of front door

FIGURE 2.1 Operation/Display Panel (Front panel)

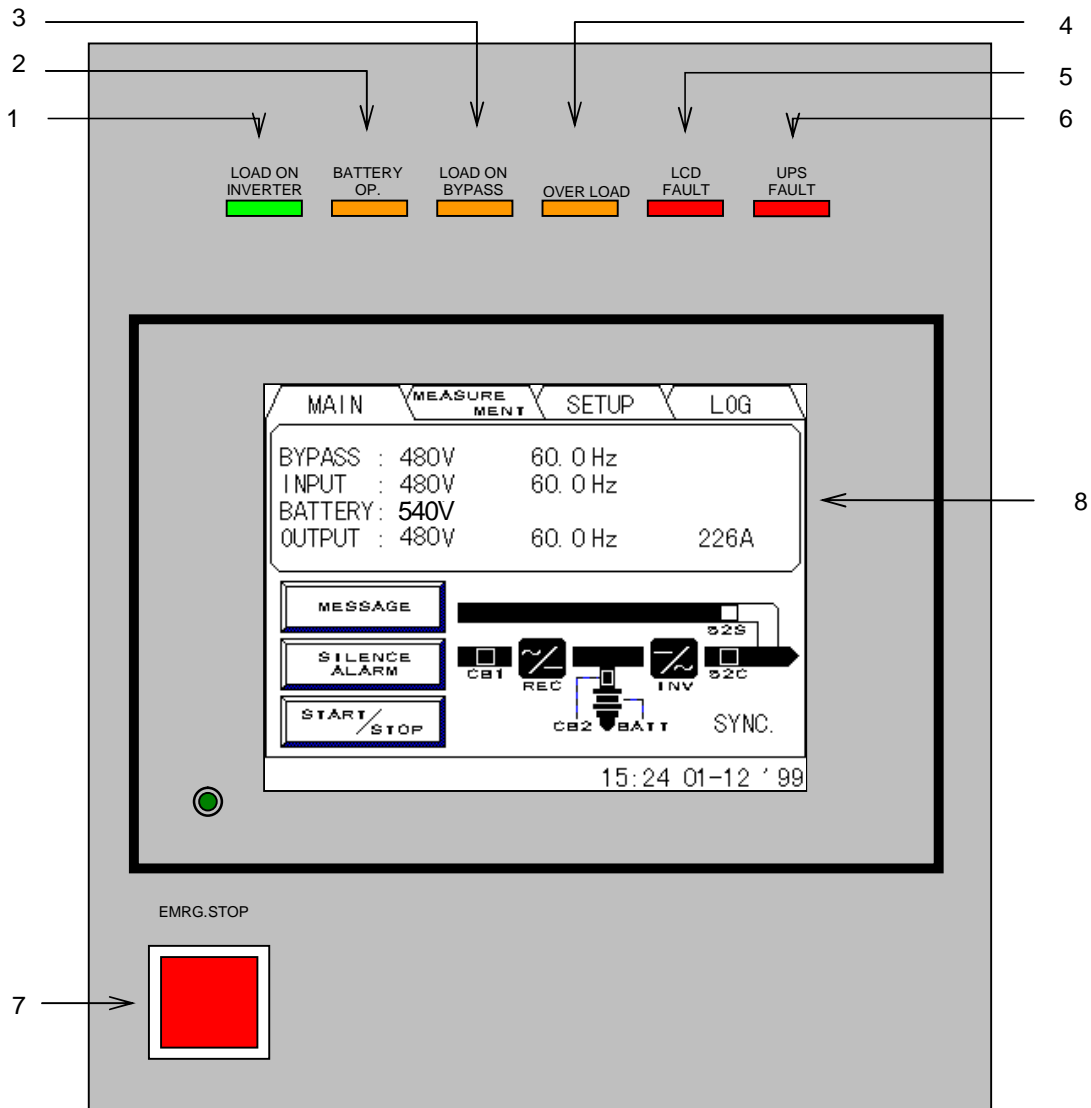

2.1 LED DISPLAY

- 1) **Load on inverter [LOAD ON INVERTER](green)**
Illuminates when power is supplied from inverter to the critical load.
(Indicates the state of inverter transfer switch "52C".)
- 2) **Battery operation [BATTERY OP.](orange)**
Illuminates when power is supplied from batteries following a power failure.
- 3) **Load on bypass [LOAD ON BYPASS](orange)**
Illuminates when power is supplied to load devices by static bypass.
(Indicates the state of bypass transfer switch "52S".)
- 4) **Overload [OVERLOAD](orange)**
Illuminates in overload condition.
- 5) **LCD fault [LCD FAULT](red)**
Illuminates when an error occurs.
- 6) **UPS fault [UPS FAULT](red) [Annunciator: intermittent or constant tones]**
Illuminates when an error occurs in the system. In this case, the details of the error are indicated on the display panel.

2.2 EPO BUTTON (Emergency Power Off button) (7)

When activated, the Emergency Power Off (EPO) function shuts down the UPS module. The critical load will lose power and also shutdown. The EPO function can be performed both locally or remotely.

2.3 LIQUID CRYSTAL DISPLAY (8)


The Liquid Crystal Display (LCD) panel indicates power flow, measured values, operational guidance, data records and error messages. The LCD panel has a back-light which facilitates viewing in different ambient lighting conditions. The LCD will automatically clear and turn off, if the screen is not activated within 3 minute period. The LCD is turned back on when it is touched again. The ERROR indicator is cleared after 24 hours and can be reproduced by pressing any key on the panel.

2.3.1 MENU

A) MAIN MENU (FIGURE 2.2)

The LCD panel indicates power flow and measured values, while also operating the start/stop function. The LCD panel also allows the user to verify the status and operation of the UPS Module.

FIGURE 2.2 Main screen

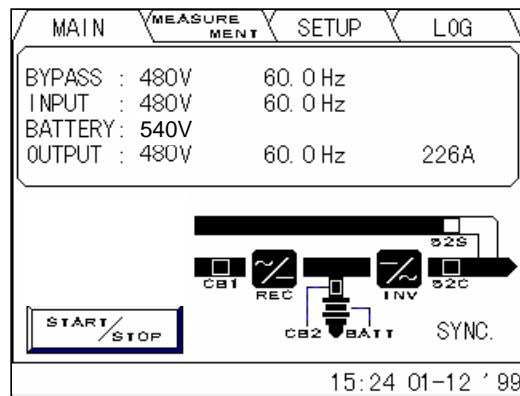

The following will be displayed when the START/STOP key on the LCD panel is pressed:

1) Start/Stop screen (FIGURE 2.3)

The display indicates the start and stop operations for the UPS system. If this operation is PIN protected, the user is required to enter the security PIN before the screen can be accessed. Refer to (FIGURE 2.4).

When in remote mode, the message "REMOTE operating model" will appear on this Screen. The user cannot operate the start and stop functions without changing the setup from remote mode to local mode.

When bypass voltage is abnormal, the message "Bypass voltage abnormal" will appear.

-Start: When the bypass voltage is abnormal, the LCD asks the operator if an interrupted transfer is acceptable (Load may be lost). (FIGURE 2.5)

-Stop: When the bypass voltage is abnormal, the user cannot transfer from inverter to bypass line.

FIGURE 2.3 Start/Stop screen

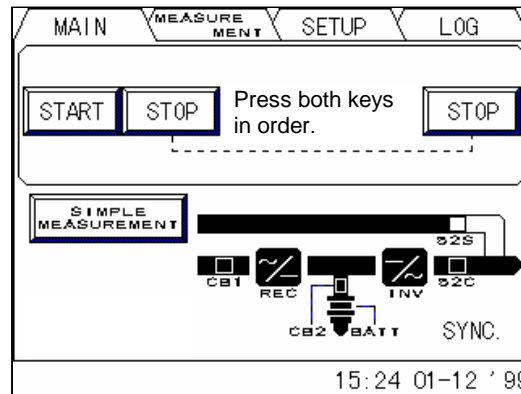


FIGURE 2.4 PIN protection screen


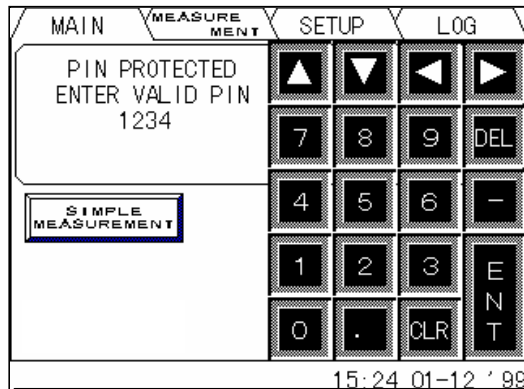



FIGURE 2.5 Bypass voltage abnormal message screen

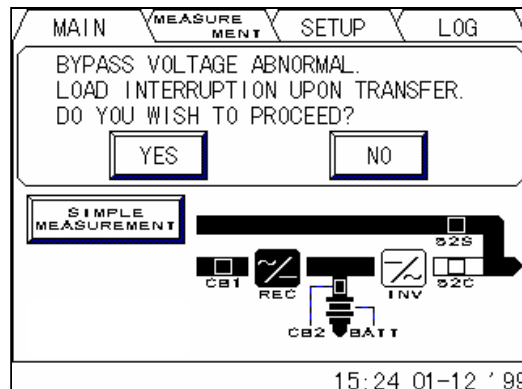

B) MEASUREMENT MENU (FIGURE 2.6)

This screen shows details of measured values. Bypass voltage, input voltage, output line to line voltage and output frequency are displayed. Output currents are displayed as RMS values.


FIGURE 2.6 Measurement screen

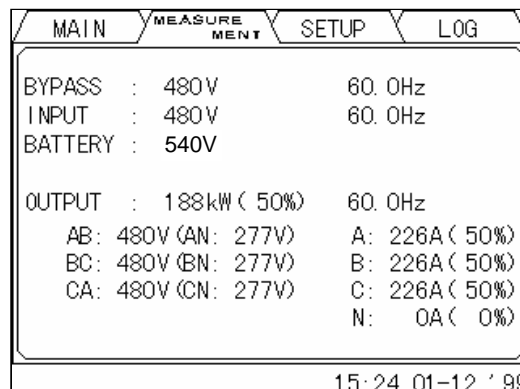

C) SETUP MENU (FIGURE 2.7)

This screen prompts the user to select: (a) whether the start & stop operation will be performed by local or remote operation; (b) date & time adjustment; (c) battery equalizing charge. The battery equalizing charge operation key will appear when battery equalizing charge is set up (Setup is based on battery type).


FIGURE 2.7 Setup screen

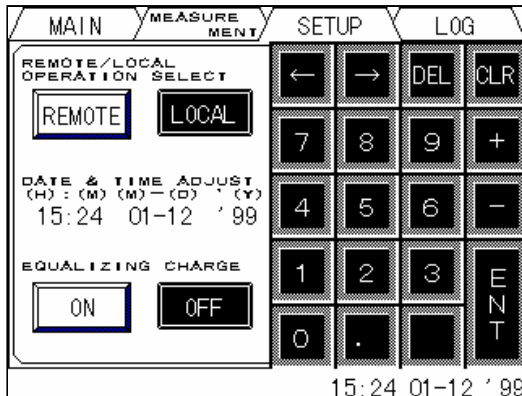

D) LOG MENU (FIGURE 2.8)

This menu shows operation / failure and battery discharge records.


FIGURE 2.8 Log select screen

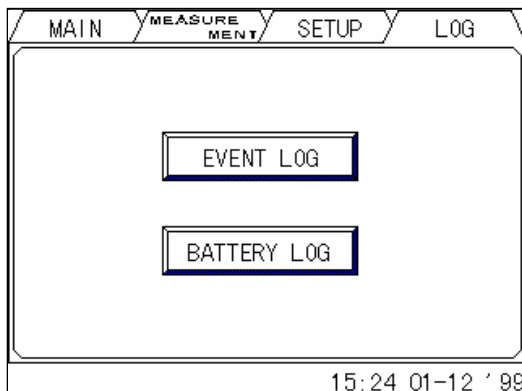

1.) Event log (FIGURE 2.9)

Operation and failure records are indicated. Maximum of 50 events are displayed.


FIGURE 2.9 Event log screen

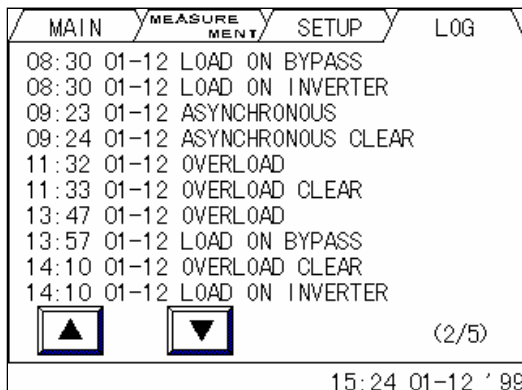

2.) Battery log (FIGURE 2.10)

This screen displays the cumulative battery discharging record.

FIGURE 2.10 Battery log screen

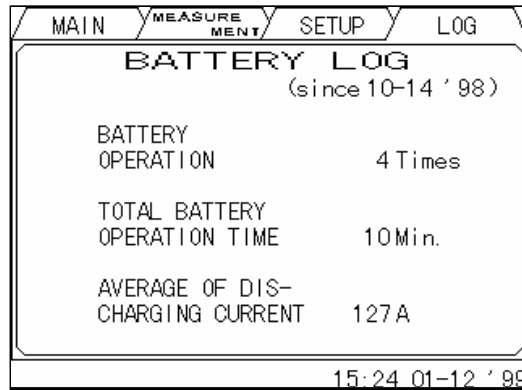

2.3.2 INPUT POWER FAILURE

During an Input Power Failure, the UPS inverter will be powered by the UPS batteries. The following will be displayed on the main and measurement screen (Indication of battery operation and remaining battery life).

FIGURE 2.11 Main screen (Battery operation)


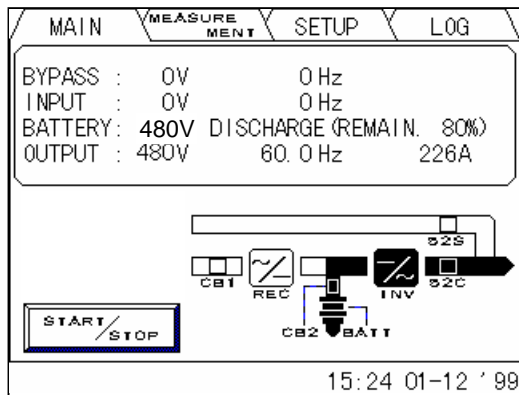


FIGURE 2.12 Measurement screen (Battery operation)

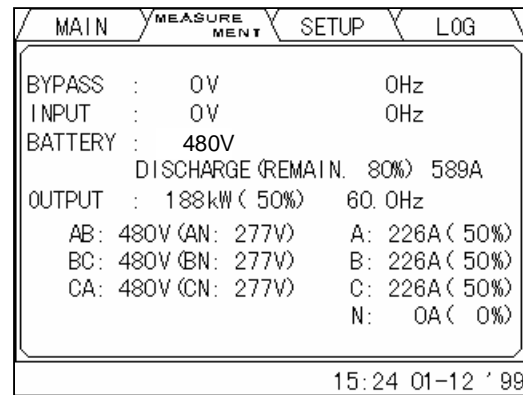


The LCD will display a battery low voltage message when the battery capacity is near depletion. The End of Battery Discharge announcement is displayed when the battery end voltage is reached. At this time, the inverter will perform an electronic shutdown to prevent battery loss of life typical from extreme deep discharge conditions. When the input power is restored, the inverter will automatically restart to power the load, and the batteries will be simultaneously recharged. The End of Battery announcement is shown at the bottom of the screen.

2.3.3 FAULT INDICATION (FIGURE 2.13)

“MESSAGE” and “SILENCE ALARM” buttons will appear on the main menu when UPS failure condition has occurred.

FIGURE 2.13 Main screen (Fault indication)

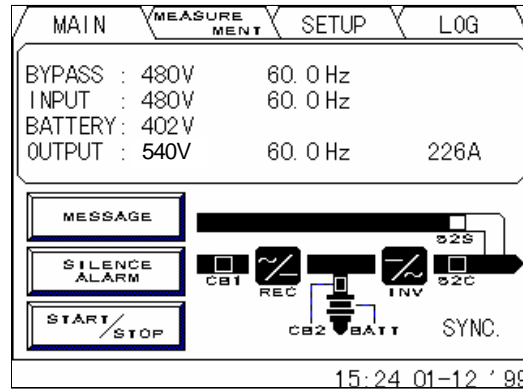


The following will be displayed when the message key on the LCD panel is pressed.

1) Message (FIGURE 2.14)

The display shows a fault code, the description of the fault and a guidance of what action is to be taken by the user. A maximum of 10 faults is displayed at one time. If an input power failure occurs during a fault condition, the fault indication and input power failure announcement are alternatively displayed at 5 second intervals.

FIGURE 2.14 Message screen

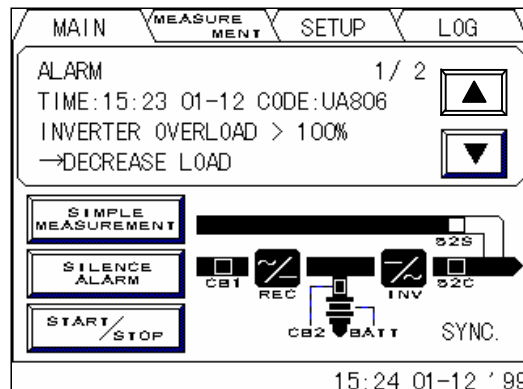

2) Silence alarm

This key will appear when a failure occurs. The audible alarm (announcing the failure) can be silenced by pressing this key.

2.4 EXTERNAL SIGNAL TERMINAL BLOCK

The UPS is equipped with a series of input/output terminals for external annunciation of alarms and for remote access of certain UPS functions. The layout of terminals is shown in Figure 2.15. with a functional description of the input/output port presented. OUT1 to OUT6 are user programmable, but are factory default set being also shown in Figure 2.15.

FIGURE 2.15-1 External Signal Terminal Block (NEC Class2)



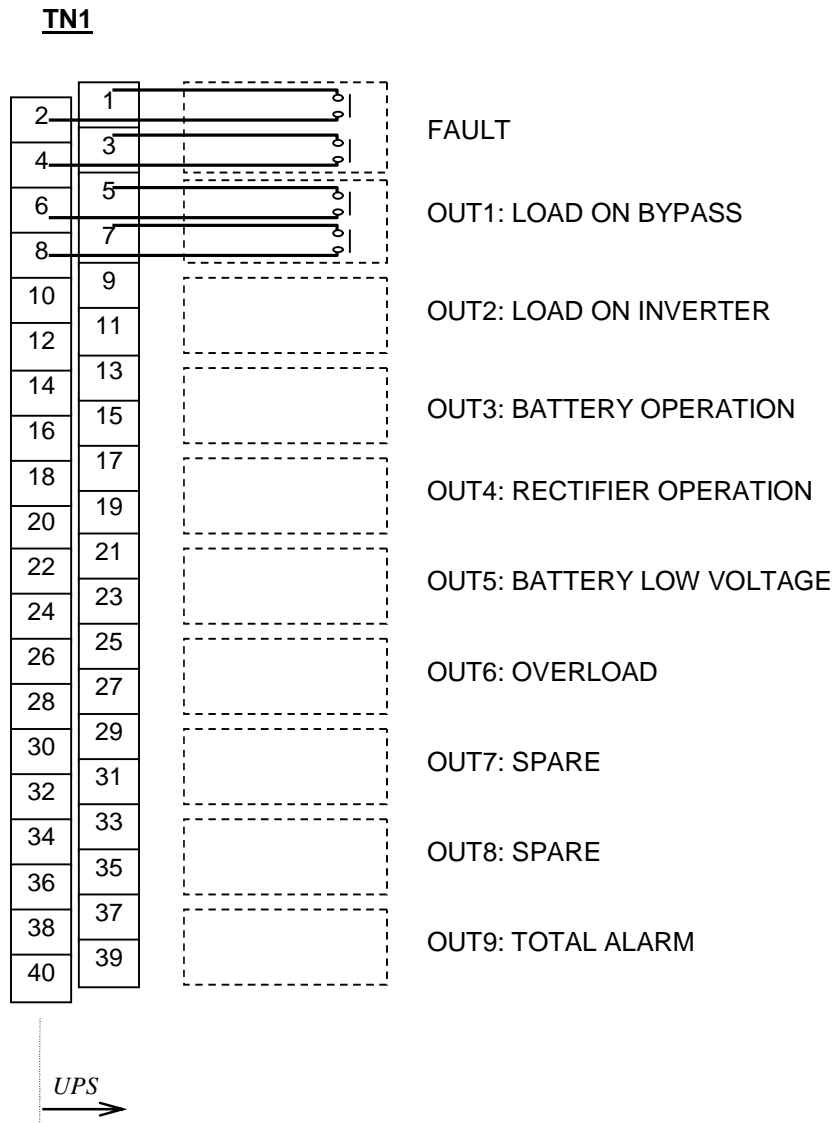


FIGURE 2.15-2 External Signal Terminal Block (NEC Class2)

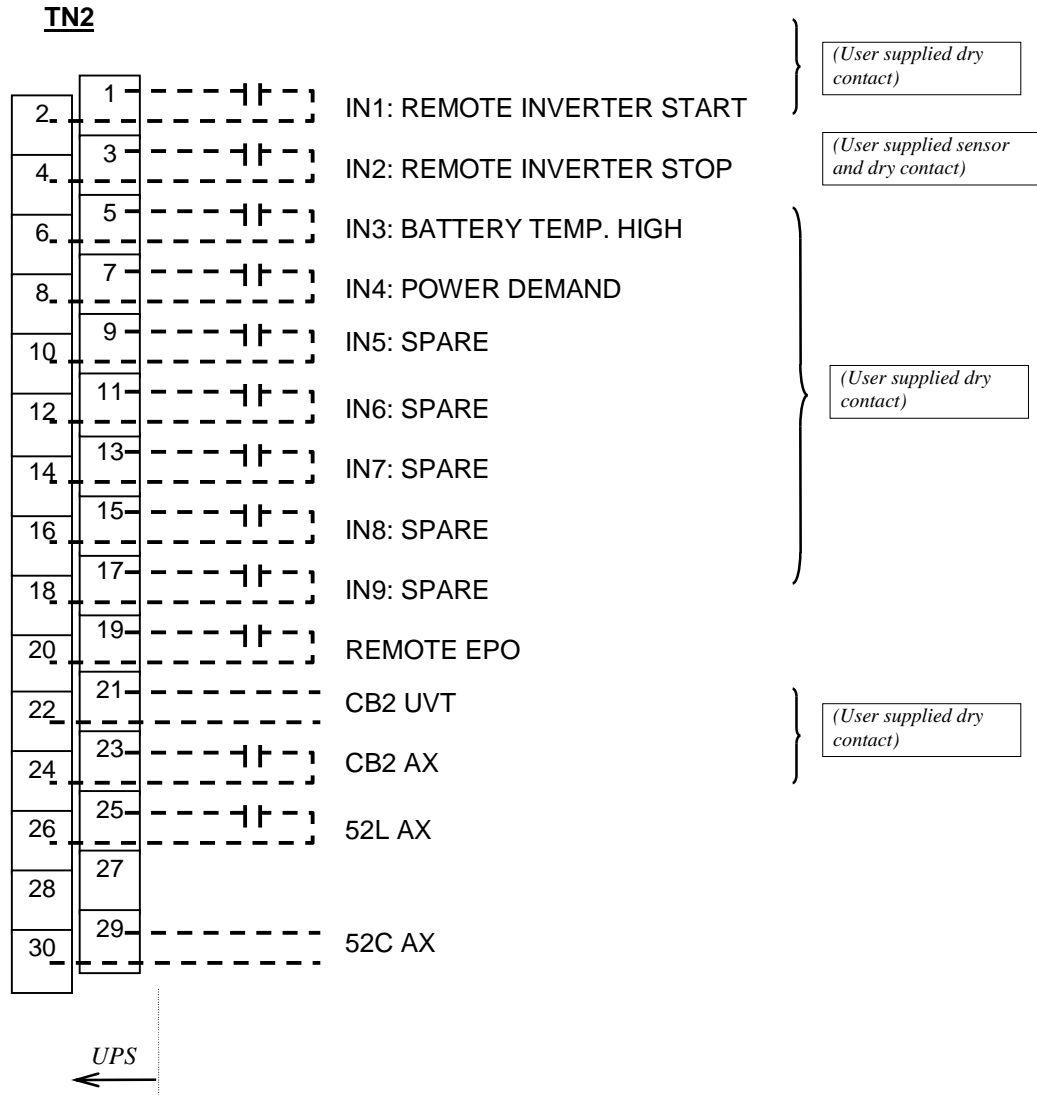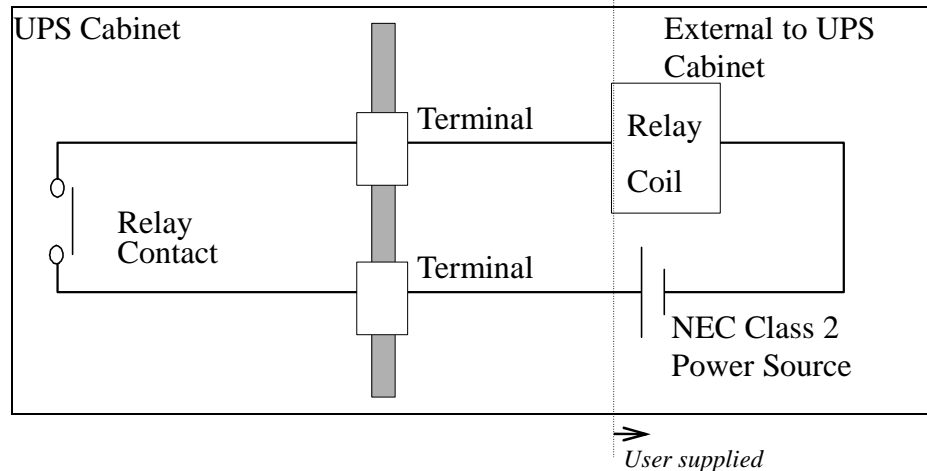

A) Output Contacts (for external alarm annunciation)

Output contacts consist of form "A" dry type contacts. Rated capacity of all output contacts is NEC Class2 (30Vdc/1Adc). All dry contacts should be operated at their rated values or lower. Figure 2.16 illustrates a typical installation. The external relay can also be a lamp, LED, computer, etc.

FIGURE 2.16 Control Wiring for External Contacts

Details of output alarm contacts : TN1
Terminals 1 to 2, 3 to 4 "UPS failure" contact

Activated when a major fault has occurred with the system.

Terminals 5 to 6, 7 to 8 "Load on Bypass" contact (OUT1)

Activated when the power is supplied from the static bypass input.

Terminals 9 to 10, 11 to 12 "Load on Inverter" contact (OUT2)

Activated when the power is supplied by the inverter.

Terminals 13 to 14, 15 to 16 "Battery Operation" contact (OUT3)

Activated when the battery is operating following an AC power failure.

Terminals 17 to 18, 19 to 20 "Rectifier Operation" contact (OUT4)

Activated when the rectifier is operating.

Terminals 21 to 22, 23 to 24 "Battery Low Voltage" contact (OUT5)

Activated when the battery voltage drops below discharge end voltage level during inverter operation (i.e. During AC fail condition).

Terminals 25 to 26, 27 to 28 "Overload" contact (OUT6)

Activated when an overload has occurred to the system.

Terminals 29 through 36 "Spare" contact (OUT7 and OUT8)
Terminals 37 to 38, 39 to 40 "Total Alarm" contact (OUT9)

Activated when an alarm has output to the system.



NOTE: *The UPS is equipped with a selectable output contact feature. The above alarms are the default settings. Contact MITSUBISHI ELECTRIC POWER PRODUCTS, INC for setup information.*

B) Input Contacts (for remote access of UPS)


External contacts are provided by the user of the UPS system. Terminal voltage at the UPS is 24Vdc. Provide external dry contact accordingly.



CAUTION: *Do not apply voltages to remote access input terminals. Damage to UPS may result.*

Refer to Figure 2.17 for a typical wiring configuration. Although this figure applies to the remote start/stop terminals, the same wiring arrangement is used for emergency stop; battery liquid low; and battery temperature high.

FIGURE 2.17 Remote "Start" Contact Connections

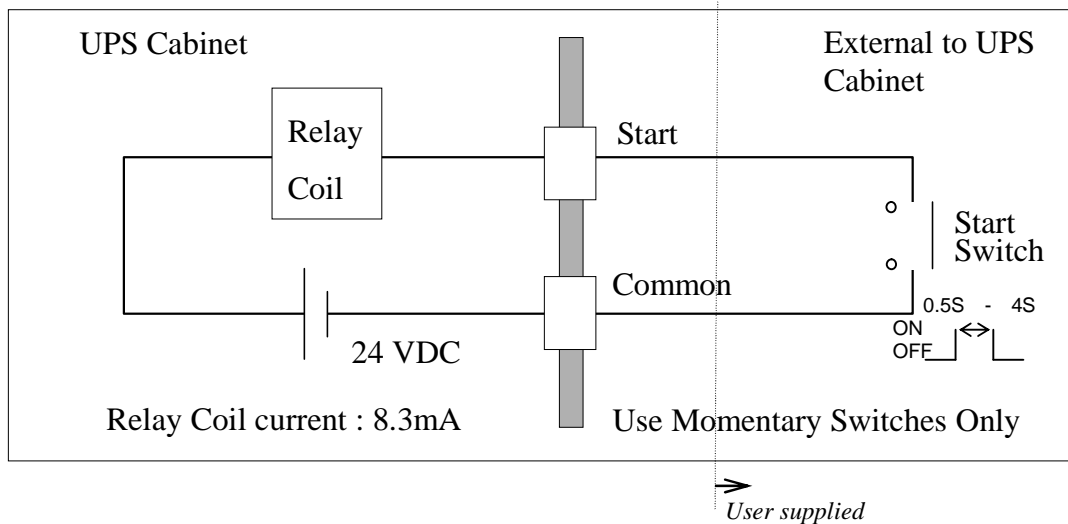

Details of input contacts for remote access : TN2

Terminals 1 to 2 Remote "Inverter Start" input terminal (IN1)

Used to start inverter from a remote location. UPS must be programmed for remote operation. Refer to Operations Menu for procedure.

Terminals 3 to 4 Remote "Inverter Stop" input terminal (IN2)

Used to stop inverter from a remote location. UPS must be programmed for remote operation. Refer to Operations Menu for procedure.

Terminals 5 to 6 "Battery Temp. High" contact input (IN3)

Input fed by a thermocouple that monitors battery temperature. The converter float voltage level is reduced for battery over-temperature conditions. External thermocouple is user supplied

Terminals 7 to 8 "Power Demand Command" contact input (IN4)

This contact is used to control the input power. Power demand is turned ON when the contact is closed, and power demand is turned OFF when the contact is open.

Terminals 9 to 18 "Spare" contact input (IN5 through IN9)

Terminals 19 to 20 "Remote EPO" contact input

Used to perform a remote UPS Emergency Power Off (EPO).
The load will be dropped.



NOTE: *The UPS is equipped with a selectable output contact item. The above items are the default settings. MITSUBISHI ELECTRIC POWER PRODUCTS, INC for setup information.*




CAUTION : *In all cases, a switch having a protective cover is recommended in order to reduce the possibility of accidental operation.*

2.5 EXTERNAL COMMUNICATION CONNECTOR

This is an RS232C port for "DiamondLink"* monitoring software. The layout of connector is shown in Figure 2.18.

FIGURE 2.18 External communication connector (NEC Class2)

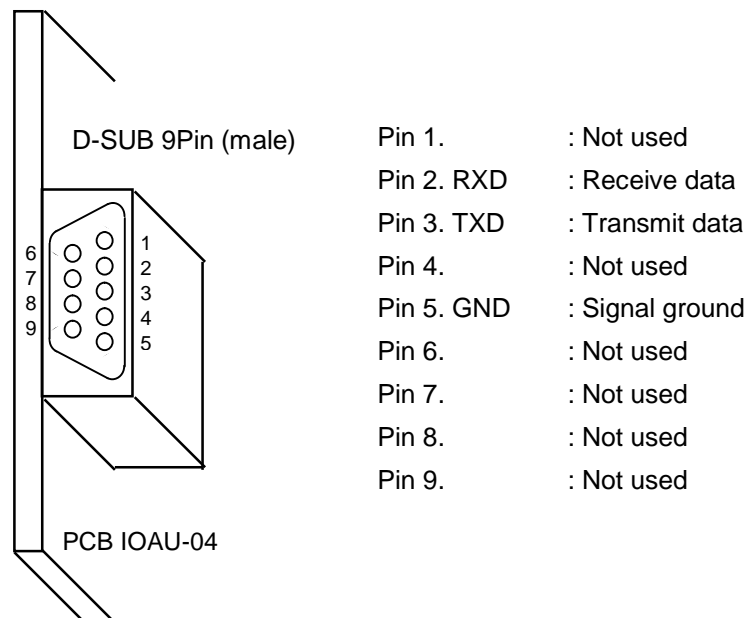

* Consult MITSUBISHI ELECTRIC POWER PRODUCTS, INC for details on "DiamondLink" monitoring software and its capabilities.

3.0 INSTALLATION AND OPERATION

3.1 TRANSPORTATION AND INSTALLATION

TABLE 3.1 How to transport and install the system

Transportation	Installation
Transport unit with forklift. Carry with overhead crane using eyebolts provided.	Using the pre-drilled holes (4 - 24) in the UPS channel base, anchor the unit using appropriate hardware. (Not provided)



CAUTION : *Do not transport in a horizontal position. Cabinets must be maintained upright within +/- 15° of the vertical during handling.*

3.2 INSTALLATION PROCEDURE

A) Note the load tolerance of the floor

Refer to Table 3.2 for list of UPS weights.

TABLE 3.2 List of UPS weights

UPS Capacity (kVA)	100	150	225	300	375	500	750
Weight (lb.)	2,061	2,579	3,263	4,564	4,916	6,923	9,193

B) Minimum clearance required for ventilation

Right side 25 mm (not required when sidecars are used)

Left side 25 mm (not required when sidecars are used)

Back side 0.0 mm

Top side 600 mm (for air flow)

C) Space requirement for routine maintenance

Allow for the following space at the time of installation.

Front 1000 mm 100kVA, 150kVA, 225kVA

1075 mm 300kVA, 375kVA, 500kVA, 750kVA

Sides 0.0 mm

Rear 0.0 mm

D) External Battery Supply

Please refer to the following when installing and maintaining batteries:



1. The customer shall refer to the battery manufacturer's installation manual for battery installation and maintenance instructions.
2. The maximum permitted fault current from the remote battery supply, and the DC voltage rating of the battery supply over-current protective device are shown in Table 3.3.

TABLE 3.3 Maximum Permitted Fault Current

UPS Capacity (kVA)	DC Voltage Rating (V)	Maximum Fault Current Permitted (A)
100	480	25,000
150	480	25,000
225	480	25,000
300	480	25,000
375	480	25,000
500	480	25,000
750	480	25,000

3.3 PROCEDURE FOR CABLE CONNECTIONS *

1. Confirm the capacity of the UPS being installed. Identify the input/output power terminal blocks as shown in the appropriate Figures 3.1 through 3.2-a~g, Figure 3.3.
2. Connect the internal control wire and power wire.
 - (1) Control wire Inter-connect
 1. CB2 NO Auxiliary to terminal TN2- 23, 24.
 2. CB2-UVT to terminal TN2- 21, 22.
 - (2) Power wire Inter-connect
 - a.) From user's distribution panel
 1. X1 (A-phase) to A bus bar in UPS rectifier section.
 2. X2 (B-phase) to B bus bar in UPS rectifier section.
 3. X3 (C-phase) to C bus bar in UPS rectifier section.

b.) DC Input to UPS

1. Positive cable to BP bus bar in UPS rectifier section.
2. Negative cable to BN bus bar in UPS rectifier section.

3. Connect the grounding conductor from the input service entrance to the UPS ground bar.

4. Two (2) sources feeding the UPS:

- (1) Connect the rectifier input power cables from the input service entrance to the rectifier input power terminals, identified as A, B, C in Figures 3.2-a~g. Input cables must be sized for an ampere rating larger than the maximum input drawn by the rectifier. (Refer to equipment nameplate for current ratings.) Confirm that an external bypass input circuit breaker (MCCB) is installed (refer to WARNING 4, page 1-4). Connect the bypass input power cables from the input service entrance to the bypass input power terminals, identified as A40, B40, C40 and N40 in Figures 3.2-a~g. Bypass input cables must be sized for an ampere rating larger than the maximum output current capacity of the UPS. Refer to Table 3.4 for recommended cable sizes.

- (2) Connect the external signal terminal block as desired. Refer to section 2.4 and Figure 2.15 for functional description. 2mm², or less, shielded conductor is recommended.

5. One (1) source feeding the UPS:

- (1) Confirm that an external input circuit breaker sized to protect both the rectifier input and the bypass line is installed. (Refer to equipment nameplate for current ratings.) Connect the bypass input power cables from the input service entrance to the bypass input power terminals, identified as A40, B40, C40 and N40 in Figures 3.2-a~g. Input cables must be sized for an ampere rating larger than the maximum current capacity of the UPS. Refer to Table 3.4 for recommended cable sizes.

- (2) Using adequately sized conductors and referring to the appropriate figure identified in Figures 3.2-a~g, connect jumper bypass terminals A40, B40, C40 to rectifier input power terminals A, B, C as identified in Figures 3.2-a~g.

- (3) Connect the external signal terminal block as desired. Refer to section 2.4 and Figure 2.15 for functional description. 2mm², or less, shielded conductor is recommended.

CAUTION : 1. *Confirm that all UPS internal contactors (breakers) "CB1", "CB2", and "CB3" are open before energizing UPS.*



2. *UPS power terminals are supplied with stud type fittings.*

It is recommended that compression lugs be used to fasten all input/output power cables.

6. Procedure for Cable Connections for Parallel System

- (1) Confirm the number of units to be connected in parallel. Identify the input/output power terminal blocks and control wire connections for parallel systems as shown in the appropriate Figures 3.4a~c.
- (2) Connect the external control wire and power wire.
- a.) Control wire connection
Parallel configuration Wiring (Refer to Figure 3.4a~c)
 - Critical Load Cabinet (CLC) TB1 to UPS-n IOAU-04,TN2.
 - Parallel Control CN92, CN93, In, Out cables between UPS modules
 - b.) Power wire connection
From UPS AC Output Terminals to CLC (Refer to Figure 3.4a~c)

TABLE 3.4 Recommended Cable Sizes

kVA Capacity	Input Voltage	Output Voltage	Input Side * 1, 2		Output Side * 1, 2		Bypass Side * 1, 2		DC Input Side * 1, 2	
			Cable Size	Torque in. lbs	Cable Size	Torque in. lbs	Cable Size	Torque in. lbs	Cable Size	Torque in. lbs
100kVA	480V	480V	1 AWG or larger	100 - 135 in. lbs	1 AWG or larger	100 - 135 in. lbs	1 AWG or larger	100 - 135 in. lbs	3/0 AWG or larger	100 - 135 in. lbs
	600V	600V	2 AWG or larger	100 - 135 in. lbs	2 AWG or larger	100 - 135 in. lbs	2 AWG or larger	100 - 135 in. lbs	3/0 AWG or larger	100 - 135 in. lbs
150kVA	480V	480V	3/0 AWG or larger	100 - 135 in. lbs	3/0 AWG or larger	100 - 135 in. lbs	3/0 AWG or larger	100 - 135 in. lbs	350 MCM or larger	100 - 135 in. lbs
	600V	600V	2/0 AWG or larger	100 - 135 in. lbs	2/0 AWG or larger	100 - 135 in. lbs	2/0 AWG or larger	100 - 135 in. lbs	350 MCM or larger	100 - 135 in. lbs
225kVA	480V	480V	300 MCM or larger	100 - 135 in. lbs	350 MCM or larger	100 - 135 in. lbs	350 MCM or larger	100 - 135 in. lbs	2x4/0 AWG or larger	100 - 135 in. lbs
	600V	600V	250 MCM or larger	100 - 135 in. lbs	250 MCM or larger	100 - 135 in. lbs	250 MCM or larger	100 - 135 in. lbs	2x4/0 AWG or larger	100 - 135 in. lbs
300kVA	480V	480V	2x4/0 AWG or larger	347 - 469 in. lbs	2x3/0 AWG or larger	347 - 469 in. lbs	2x3/0 AWG or larger	347 - 469 in. lbs	2x400 MCM or larger	347 - 469 in. lbs
	600V	600V	2x3/0 AWG or larger	347 - 469 in. lbs	400 MCM or larger	347 - 469 in. lbs	400 MCM or larger	347 - 469 in. lbs	2x400 MCM or larger	347 - 469 in. lbs
375kVA	480V	480V	3x300 MCM or larger	347 - 469 in. lbs	2x250 MCM or larger	347 - 469 in. lbs	2x250 MCM or larger	347 - 469 in. lbs	3x350 MCM or larger	347 - 469 in. lbs
	600V	600V	2x4/0 AWG or larger	347 - 469 in. lbs	2x3/0 AWG or larger	347 - 469 in. lbs	2x3/0 AWG or larger	347 - 469 in. lbs	3x350 MCM or larger	347 - 469 in. lbs
500kVA	480V	480V	3x250 MCM or larger	347 - 469 in. lbs	2x400 MCM or larger	347 - 469 in. lbs	2x400 MCM or larger	347 - 469 in. lbs	3x500 MCM or larger	347 - 469 in. lbs
	600V	600V	2x350 MCM or larger	347 - 469 in. lbs	2x300 MCM or larger	347 - 469 in. lbs	2x300 MCM or larger	347 - 469 in. lbs	3x500 MCM or larger	347 - 469 in. lbs
750kVA	480V	480V	3x500 MCM or larger	347 - 469 in. lbs	3x500 MCM or larger	347 - 469 in. lbs	3x500 MCM or larger	347 - 469 in. lbs	5x500 MCM or larger	347 - 469 in. lbs
	600V	600V	3x350 MCM or larger	347 - 469 in. lbs	3x350 MCM or larger	347 - 469 in. lbs	3x350 MCM or larger	347 - 469 in. lbs	5x500 MCM or larger	347 - 469 in. lbs

*1 - The cables must be selected to be equal to or larger than the sizes listed in the table.

*2 - Voltage drop across power cables not to exceed 2% of nominal source voltage.

*3 - Allowable ampere-capacities based on 90 degree C insulation at ambient temperature of 30 degree C.

Not more than 3 conductors in a raceway without de-rating.

Note: Copper conductors assumed.

TABLE 3.5 Crimp Type Compression Lug

WIRE SIZE (CODE)	WIRE STRAND CLASS	RECOMMENDATION		CRIMP TOOL REQUIRED BURNDY TYPE Y35 OR Y46	
		VENDOR	CAT. NO.	COLOR KEY	DIE INDEX
1	B	BURNDY	YA1C	GREEN	11 / 375
	I	ILSCO	CRA-1L	GREEN	11 / 375
	I	BURNDY	YA25-LB	---	1019
1/0	B	BURNDY	YA25	PINK	12 / 348
	I	ILSCO	CRA-1/OL	PINK	12 / 348
	I	BURNDY	YA25-LB	---	1020
2/0	B	BURNDY	YA26	BLACK	13
	I	ILSCO	CRA-2/OL	BLACK	13
	I	BURNDY	YA27-LB	---	1021
3/0	B	BURNDY	YA27	ORANGE	14 / 101
	I	ILSCO	CRB-3/OL	ORANGE	14 / 101
	I	BURNDY	YA28-LB	---	1022
4/0	B	BURNDY	YA28	PURPLE	15
	I	ILSCO	CRB-4/OL	PURPLE	15
	I	BURNDY	YA29-LB	---	1023
250 MCM	B	BURNDY	YA29	YELLOW	16
	I	ILSCO	CRA-250L	YELLOW	16
	I	BURNDY	YA30-LB	---	1024
300 MCM	B	BURNDY	YA30	WHITE	17 / 298
	I	ILSCO	CRA-300L	WHITE	17 / 298
	I	BURNDY	YA32-LB	---	1026
350 MCM	B	BURNDY	YA31	RED	18 / 324
	I	ILSCO	CRA-350L	RED	18 / 324
	I	BURNDY	YA34-LB	---	1027
400 MCM	B	BURNDY	YA32	BLUE	19 / 470
	I	ILSCO	CRA-400L	BLUE	19 / 470
	I	BURNDY	YA36-LB	---	1027
500 MCM	B	BURNDY	YA34	BROWN	20 / 299
	I	ILSCO	CRA-500L	BROWN	20 / 299
	I	BURNDY	YA38-LB	---	1029

NOTE: When using crimp type lugs, the lugs should be crimped to the specifications given in the manufacturer's instructions for both crimp tool and lug.

FIGURE 3.1 UPS Terminal Designation

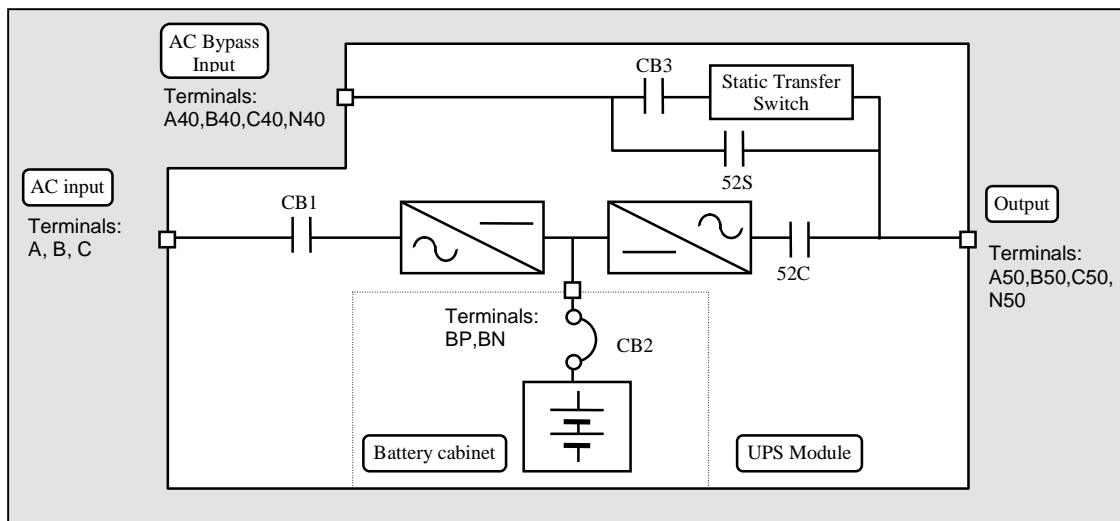


FIGURE 3.2-a-1 Diagram of input/output bus bars and terminal blocks (100kVA, 150kVA, 225kVA UPS, Input voltage 480Vac)

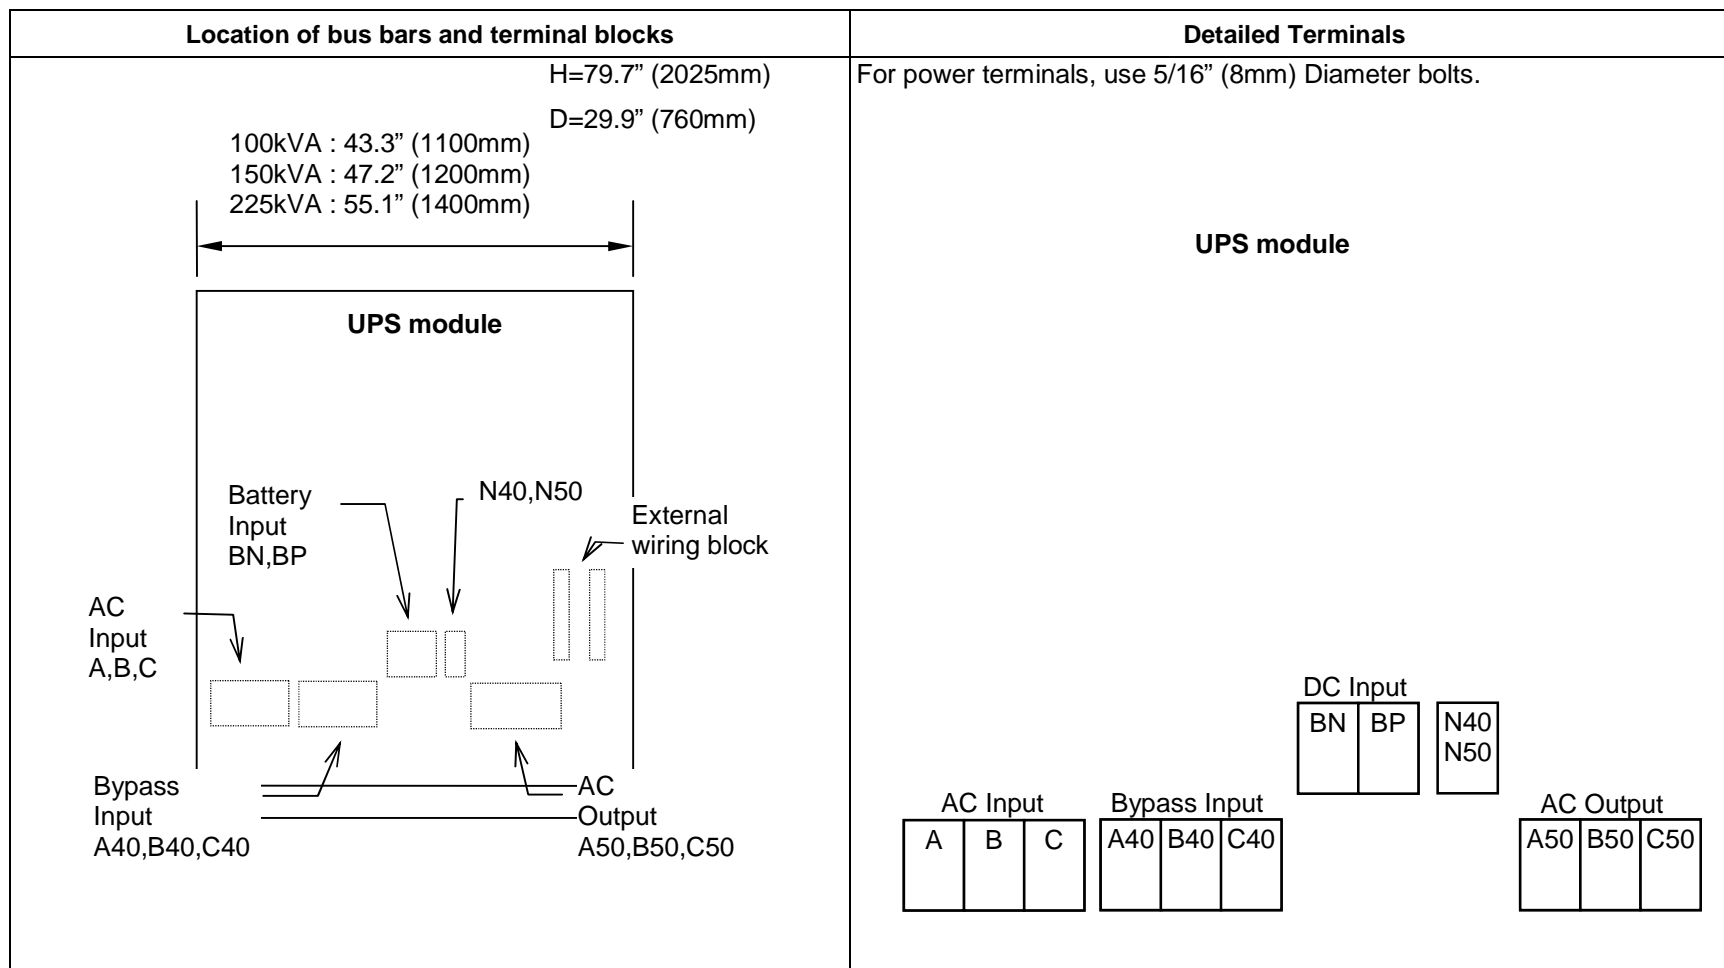


FIGURE 3.2-a-2 Diagram of Power Wire & Control Wire Inter-Connect (100kVA, 150kVA, 225kVA UPS, Input voltage 480Vac)

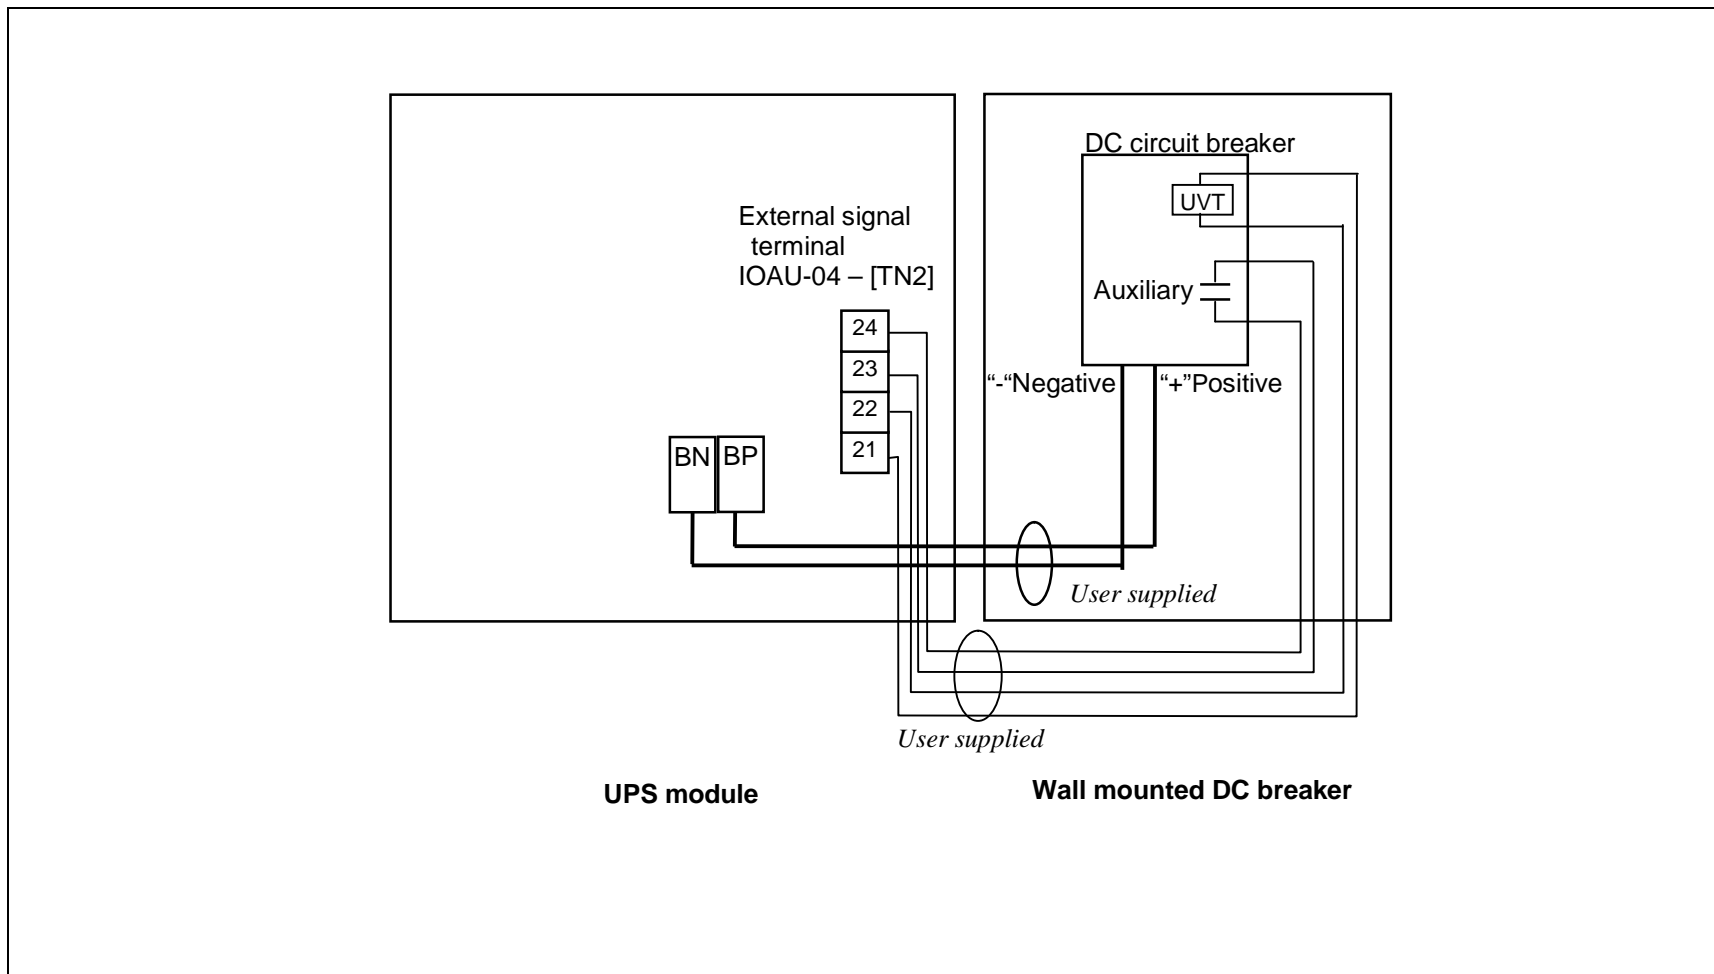


FIGURE 3.2-b-1 Diagram of input/output bus bars and terminal blocks (100kVA, 150kVA, 225kVA UPS, Input voltage 600Vac)

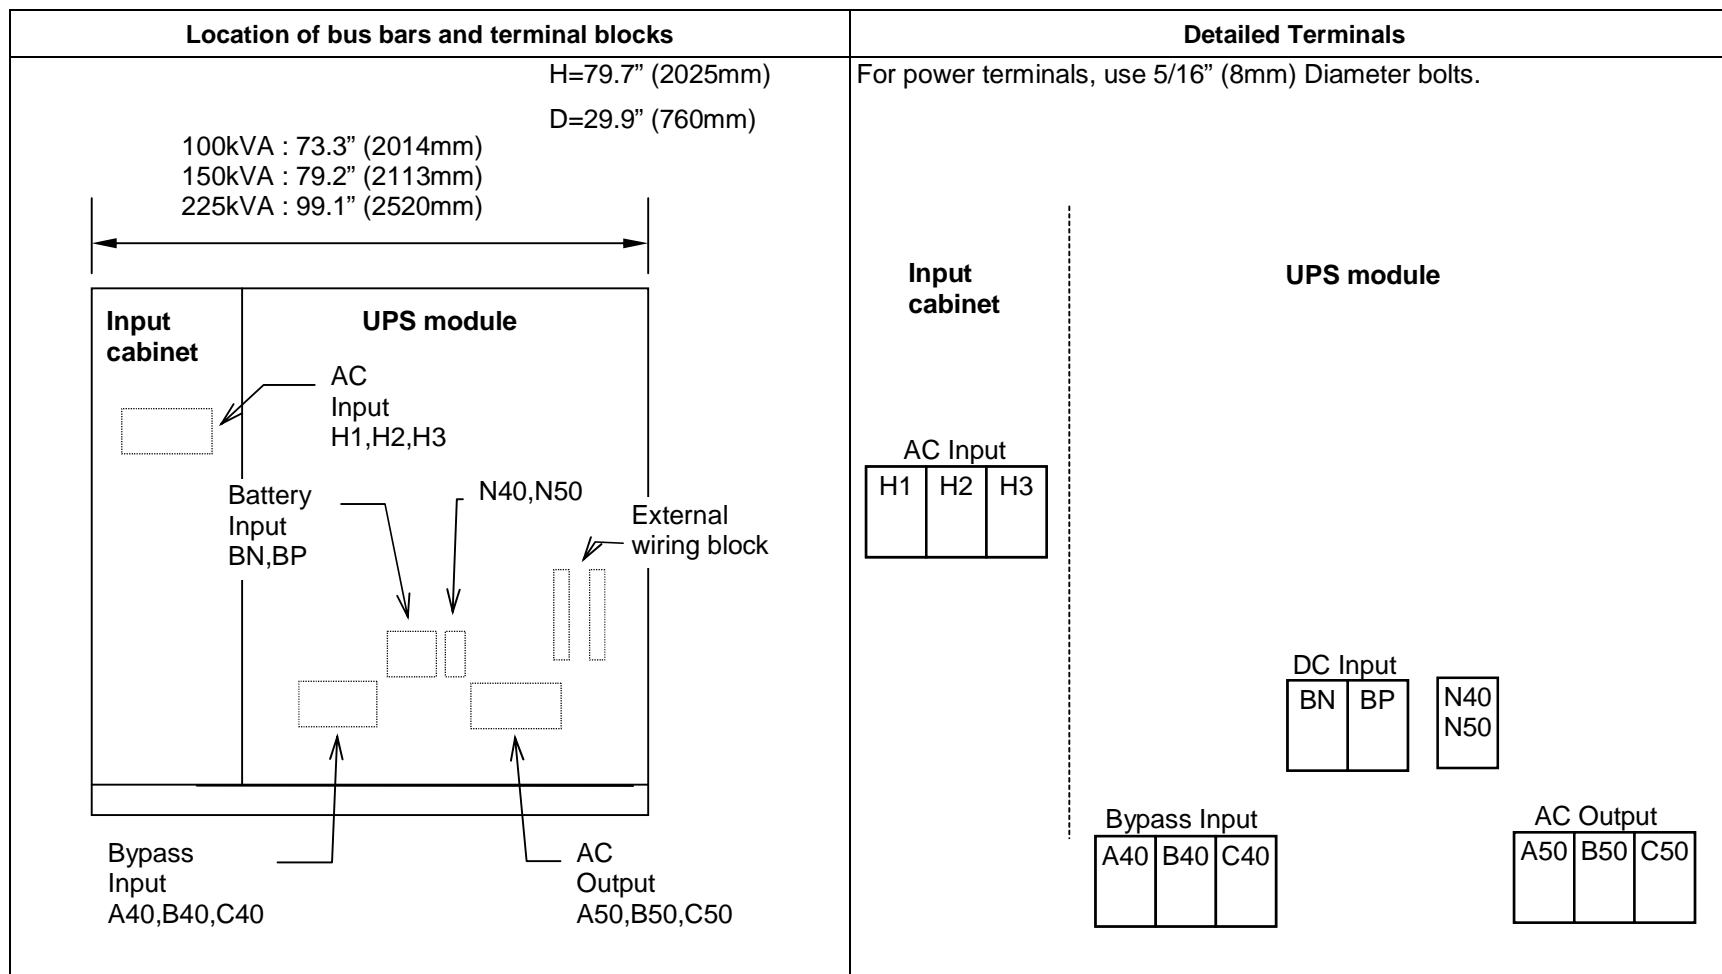


FIGURE 3.2-b-2 Diagram of Power Wire & Control Wire Inter-Connect (100kVA, 150kVA, 225kVA UPS, Input voltage 600Vac)

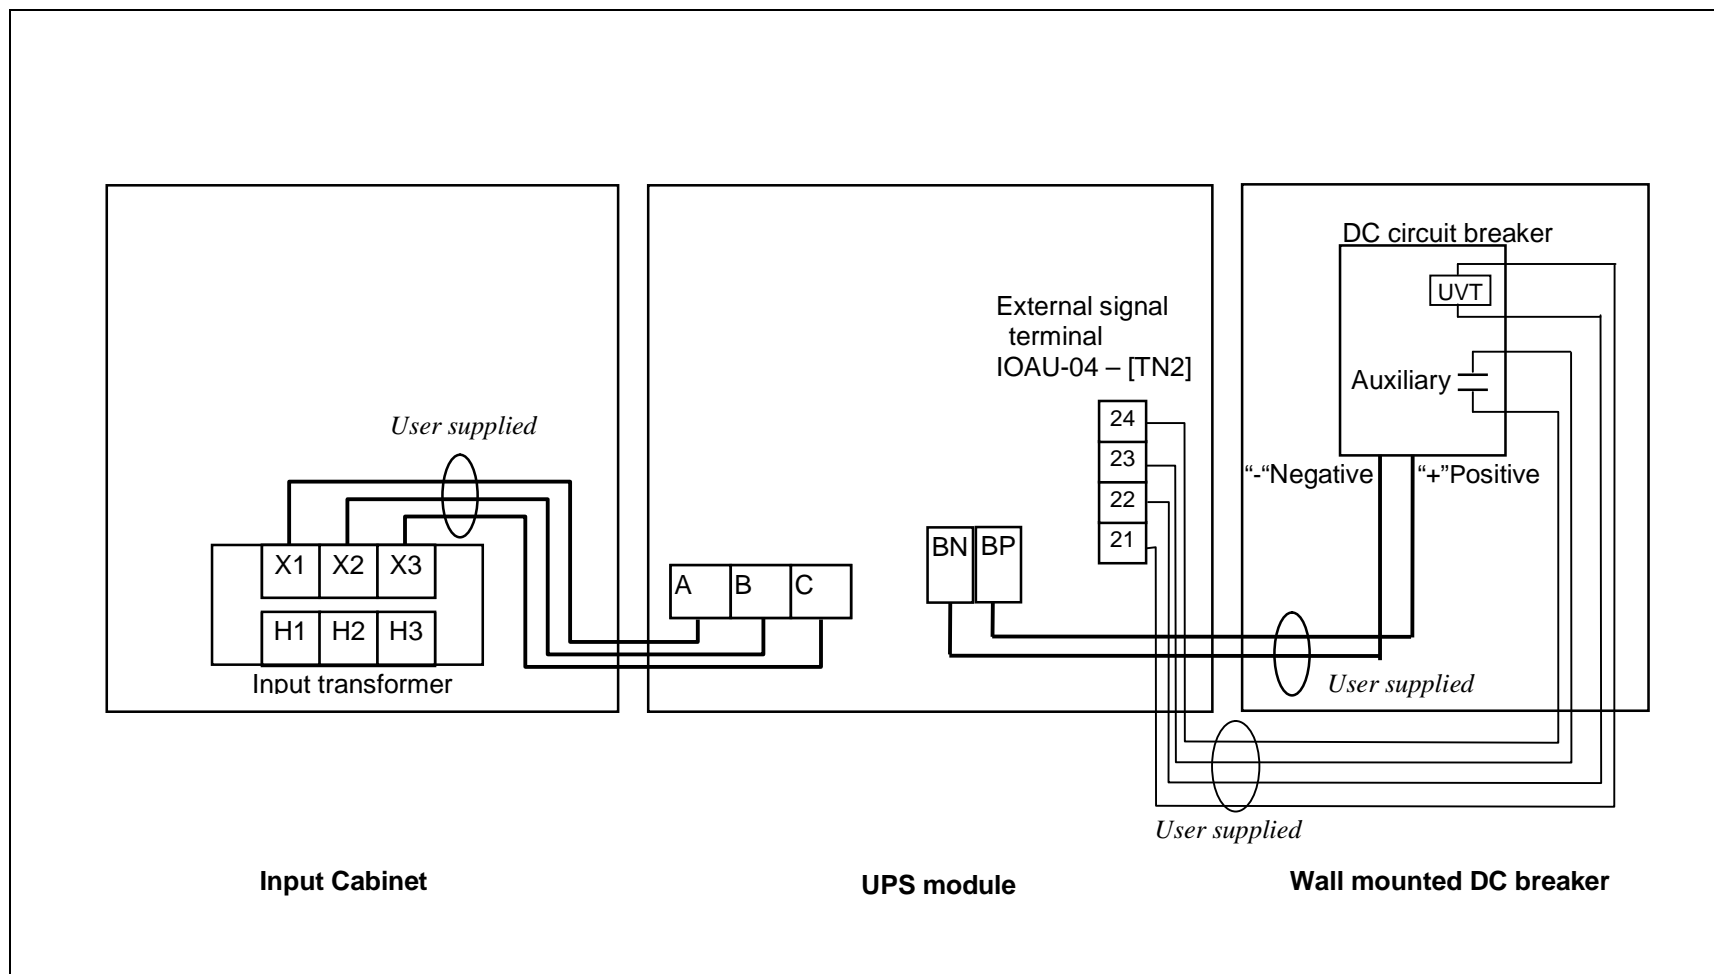


FIGURE 3.2-c-1 Diagram of input/output bus bars and terminal blocks (300kVA, 375kVA UPS, Input voltage 480Vac)

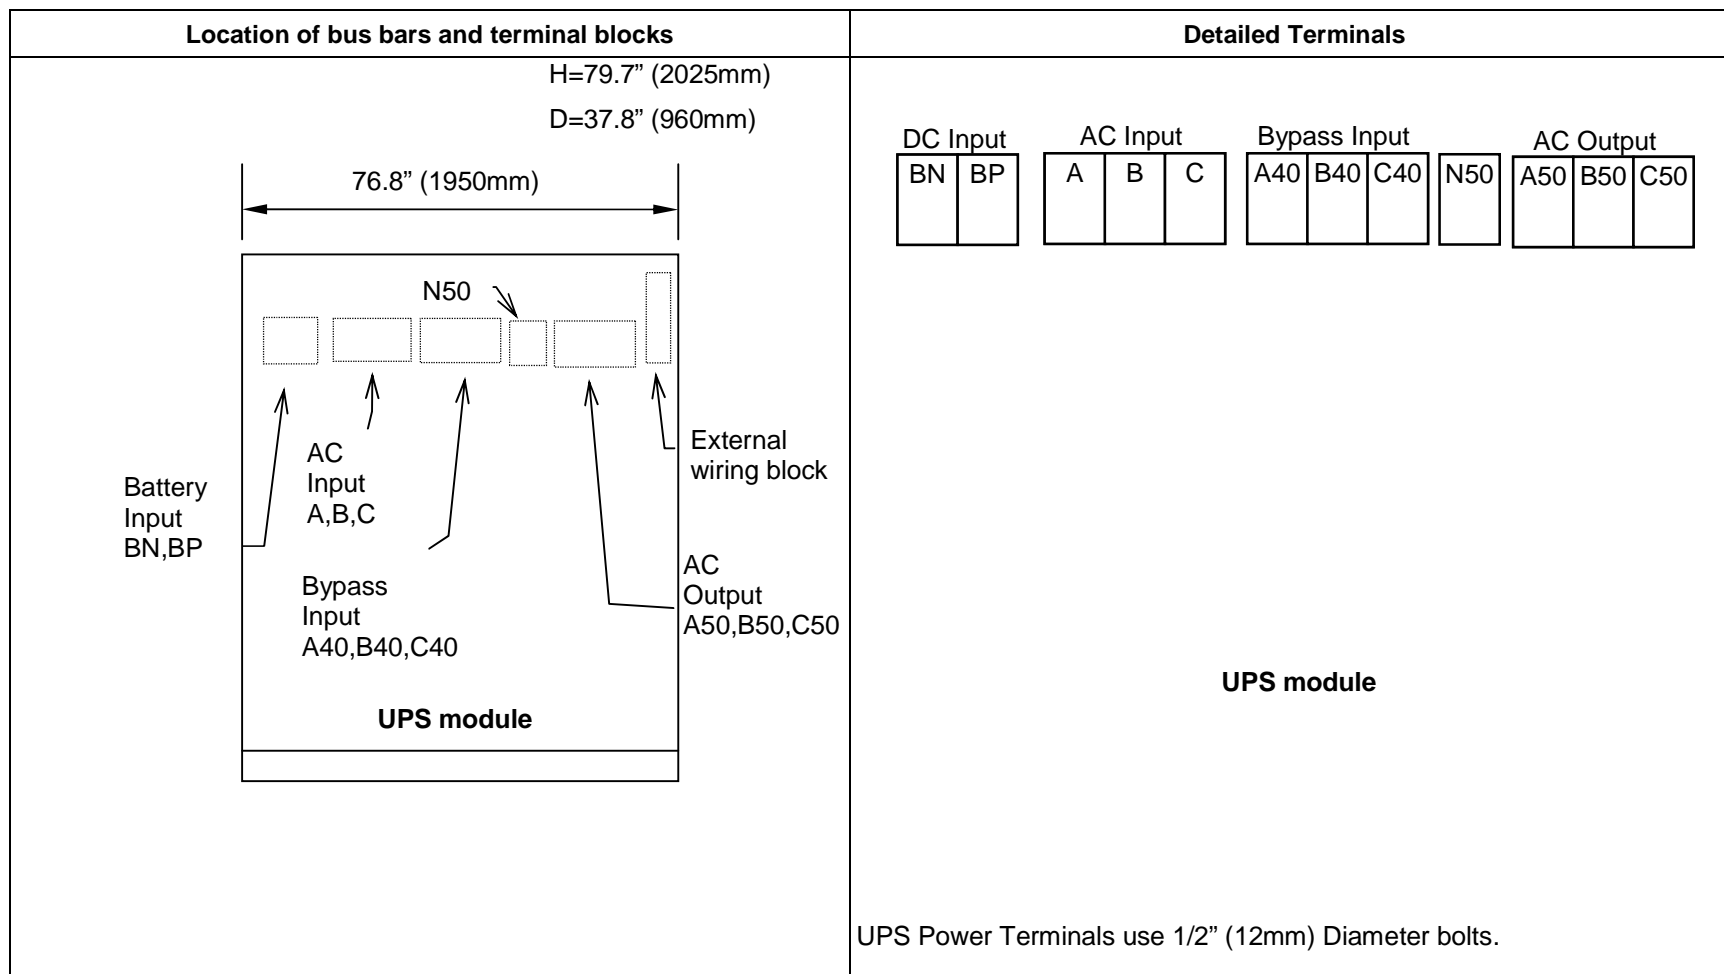


FIGURE 3.2-c-2 Diagram of Power Wire & Control Wire Inter-Connect (300kVA, 375kVA UPS, Input voltage 480Vac)

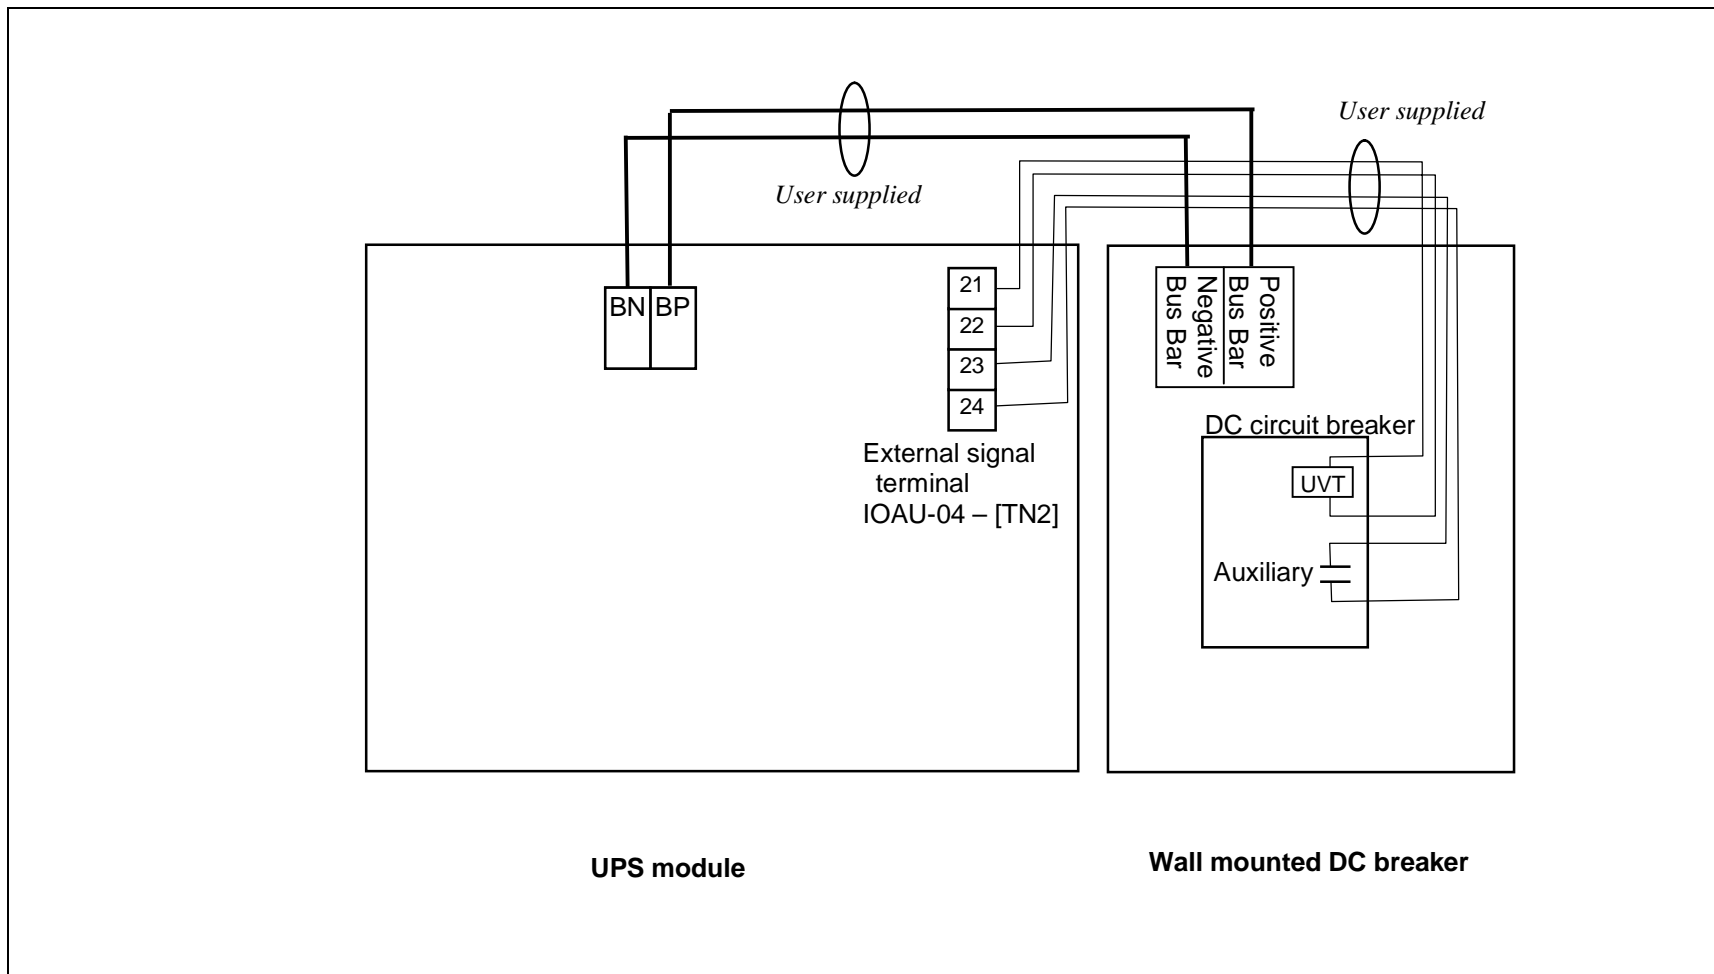


FIGURE 3.2-d-1 Diagram of input/output bus bars and terminal blocks (300kVA, 375kVA UPS, Input voltage 600Vac)

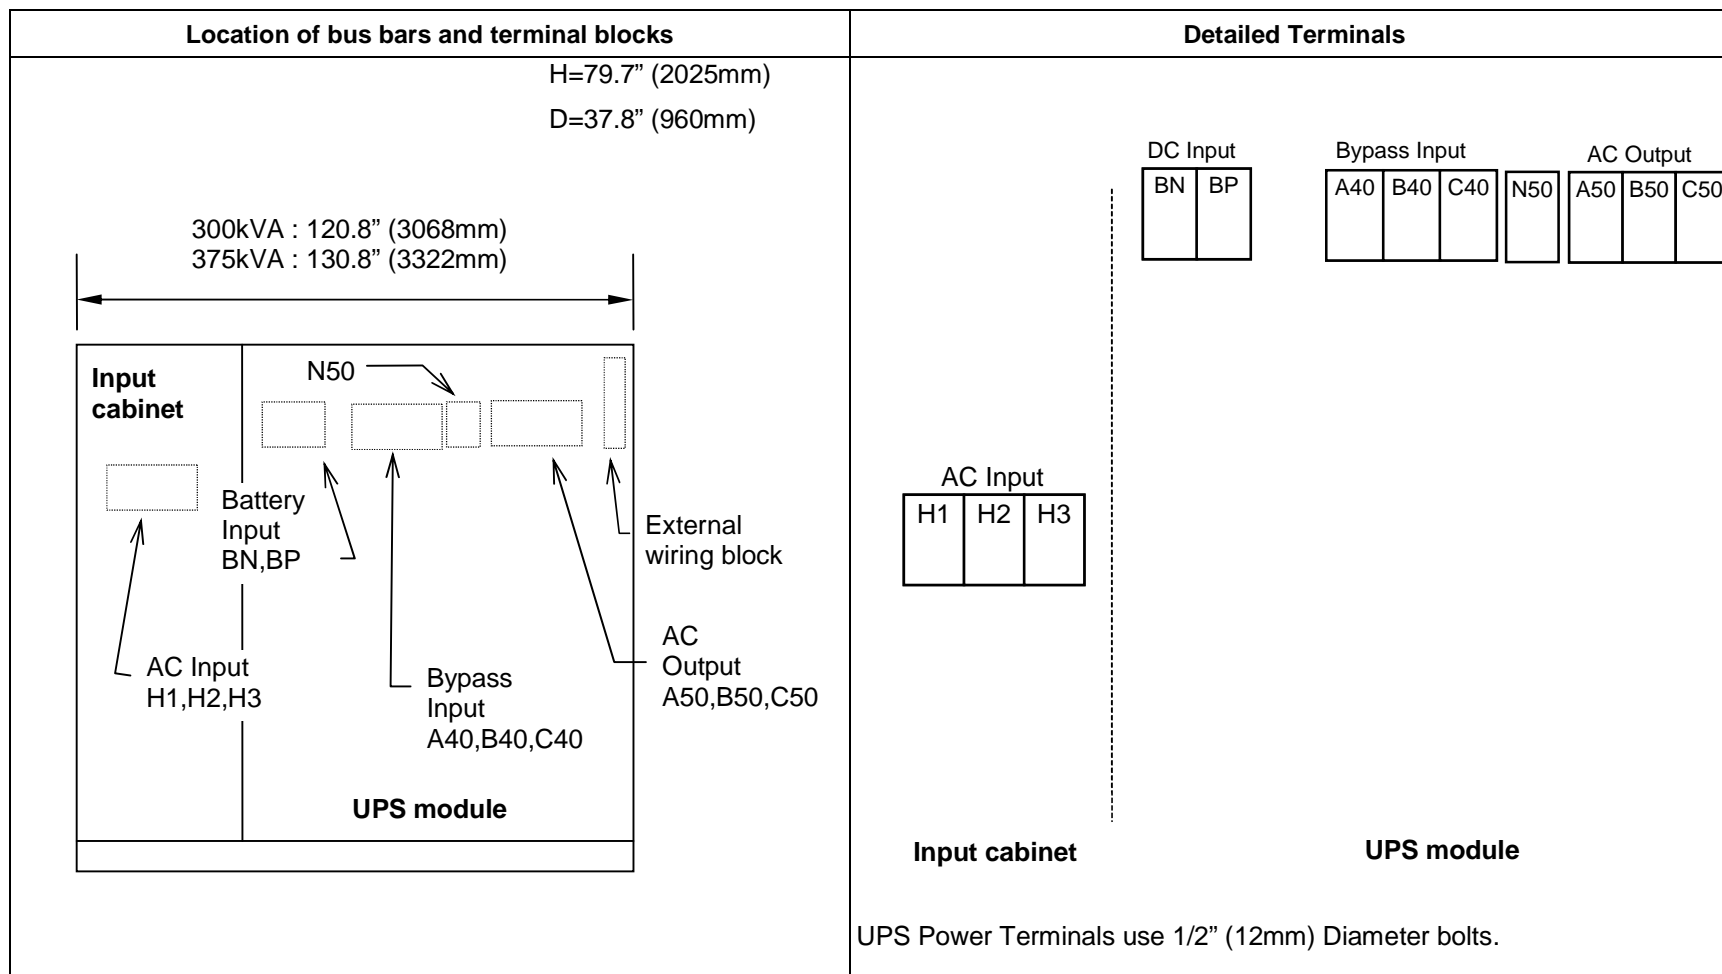


FIGURE 3.2-d-2 Diagram of Power Wire & Control Wire Inter-Connect (300kVA, 375kVA UPS, Input voltage 600Vac)

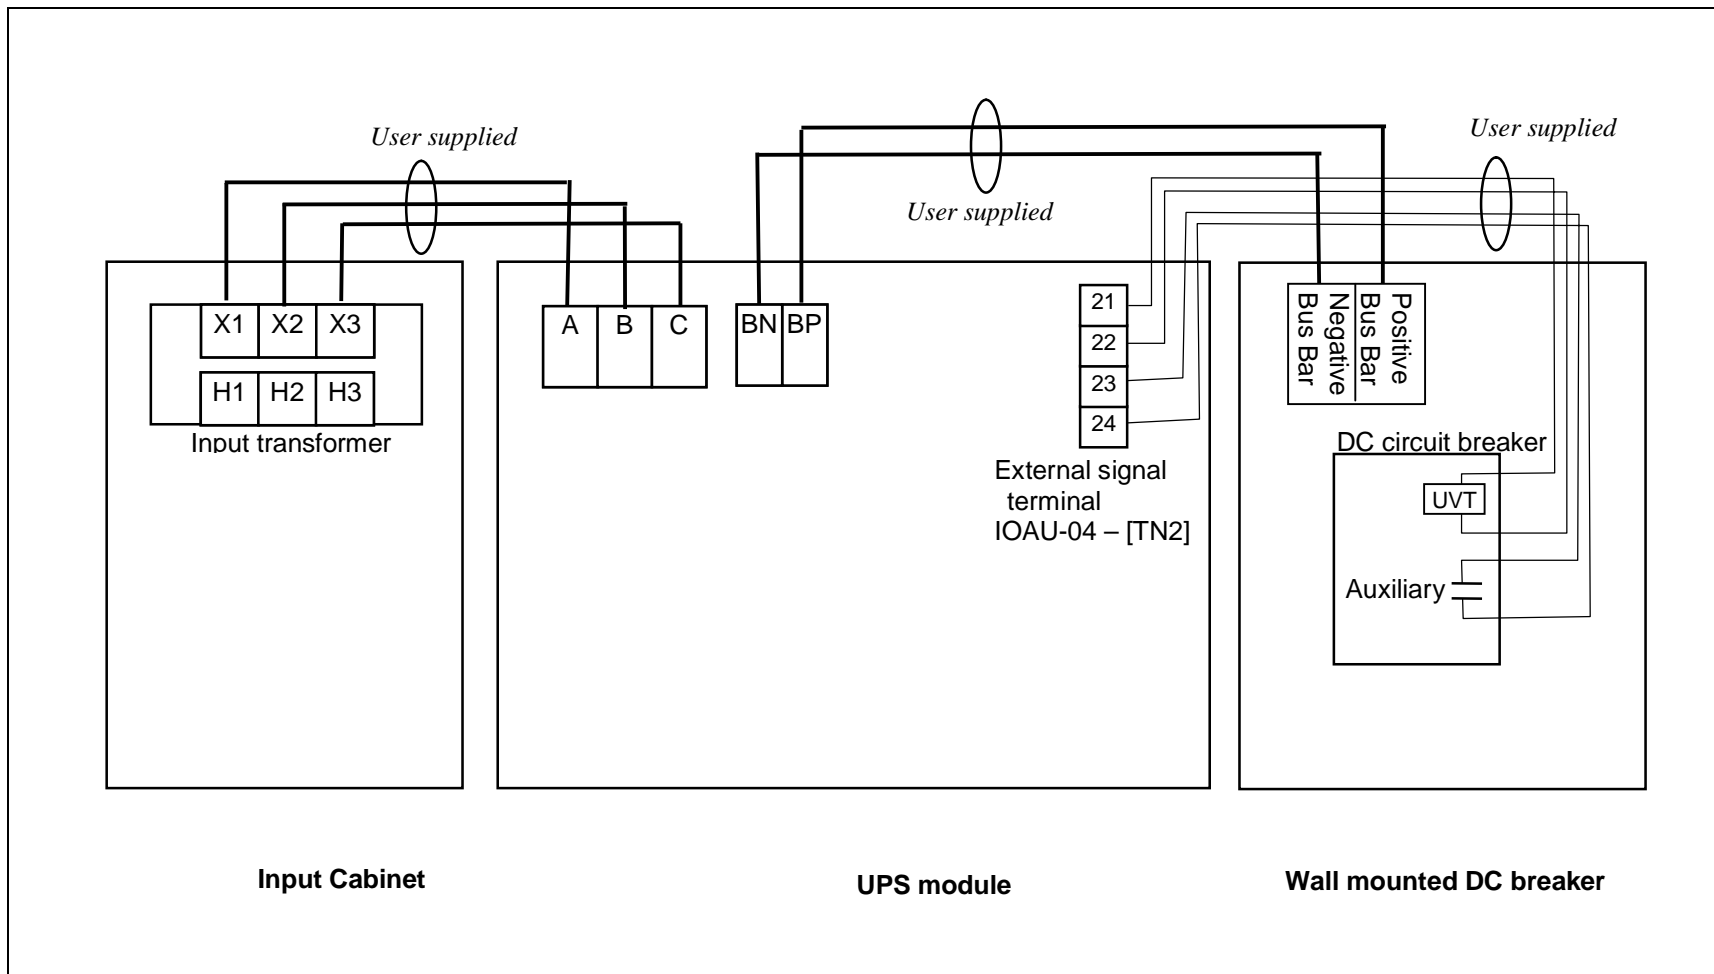


FIGURE 3.2-e-1 Diagram of input/output bus bars and terminal blocks (500kVA, 750kVA UPS, Input voltage 480Vac)

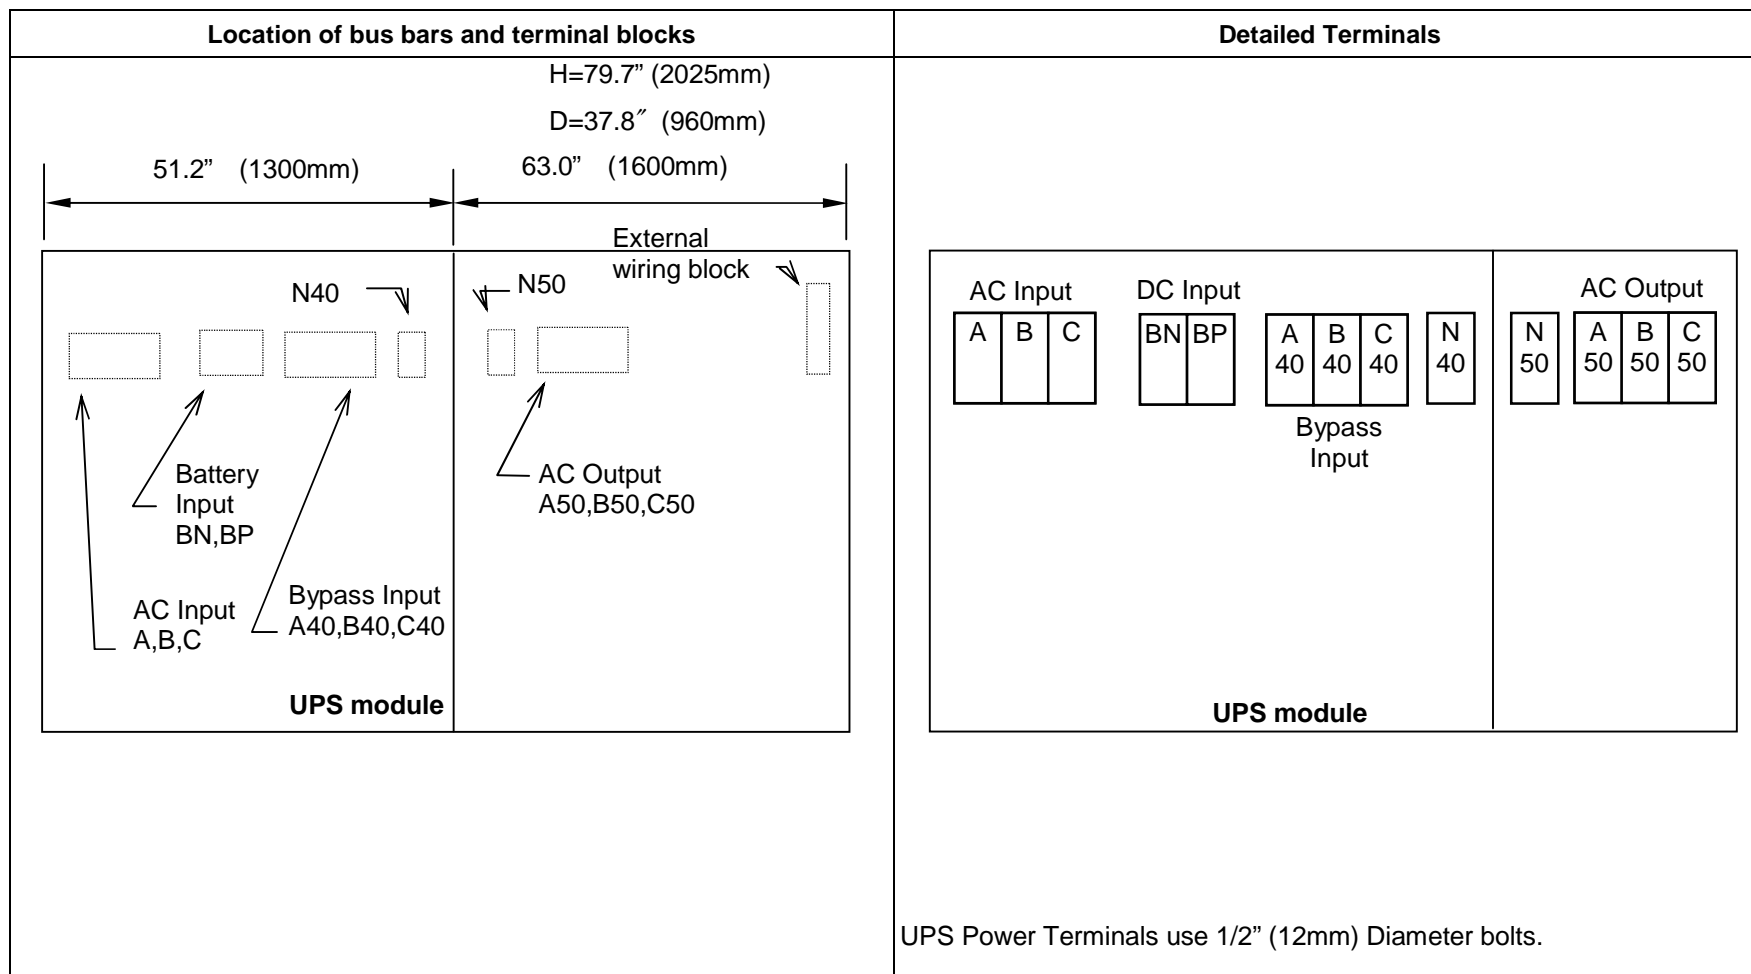


FIGURE 3.2-e-2 Diagram of Power Wire & Control Wire Inter-Connect (500kVA, 750kVA UPS, Input voltage 480Vac)

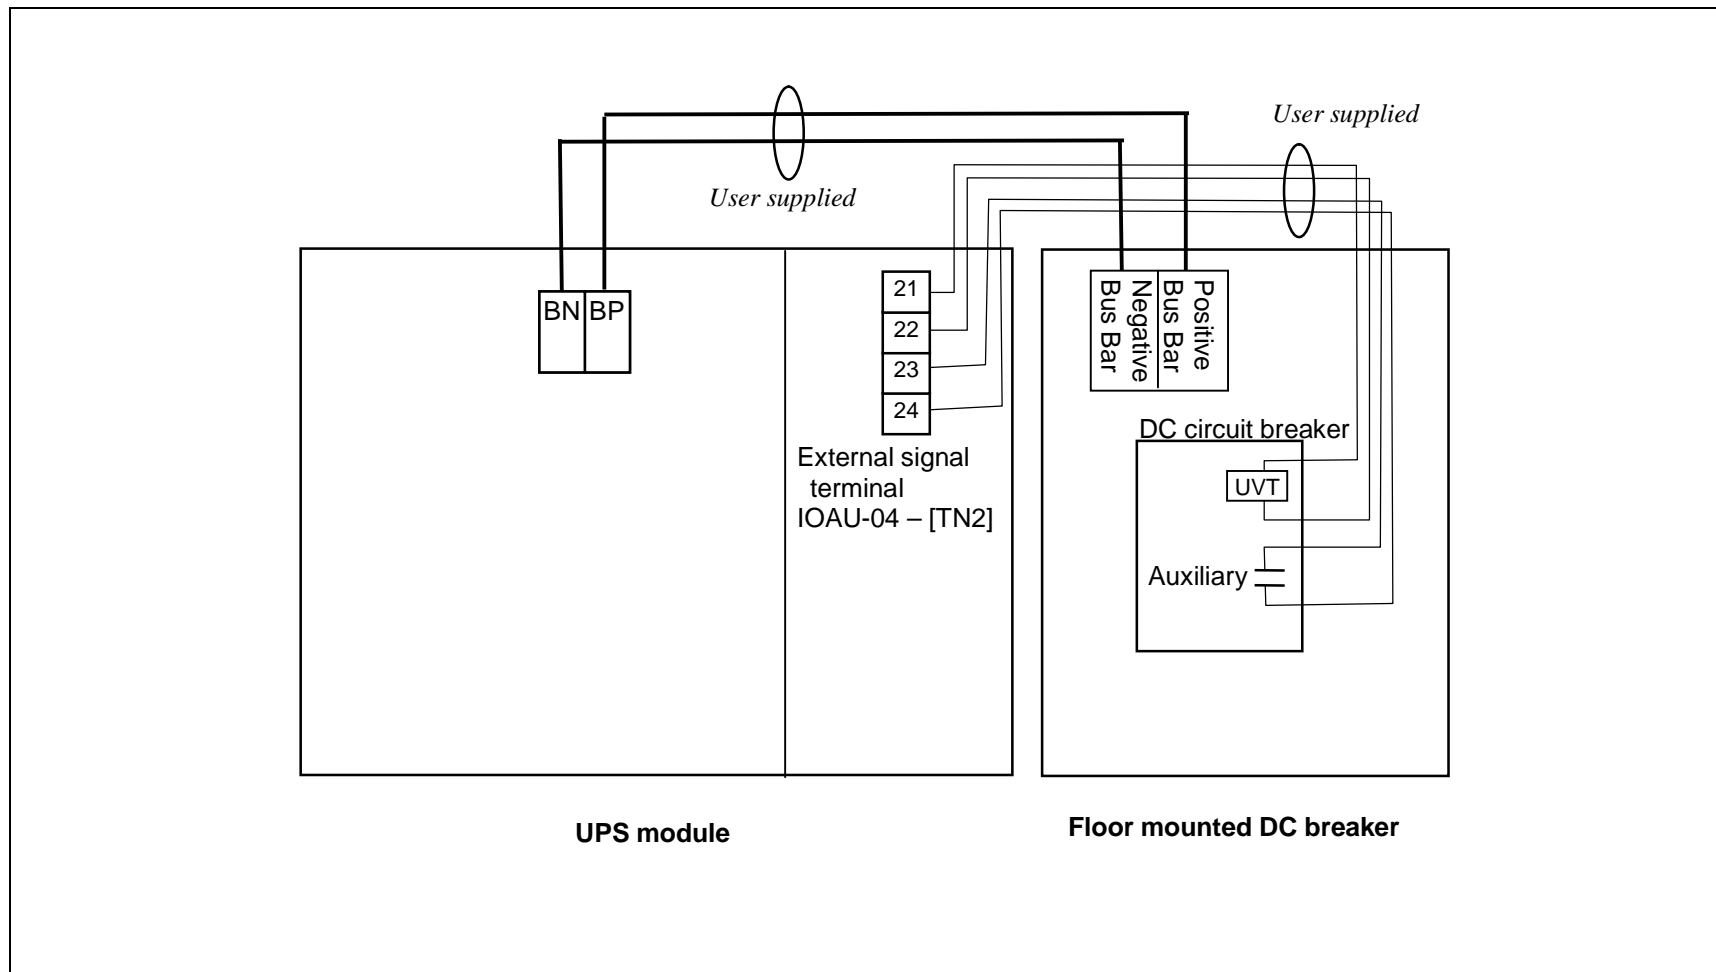


FIGURE 3.2-f-1 Diagram of input/output bus bars and terminal blocks (500kVA, 750kVA UPS, Input voltage 600Vac)

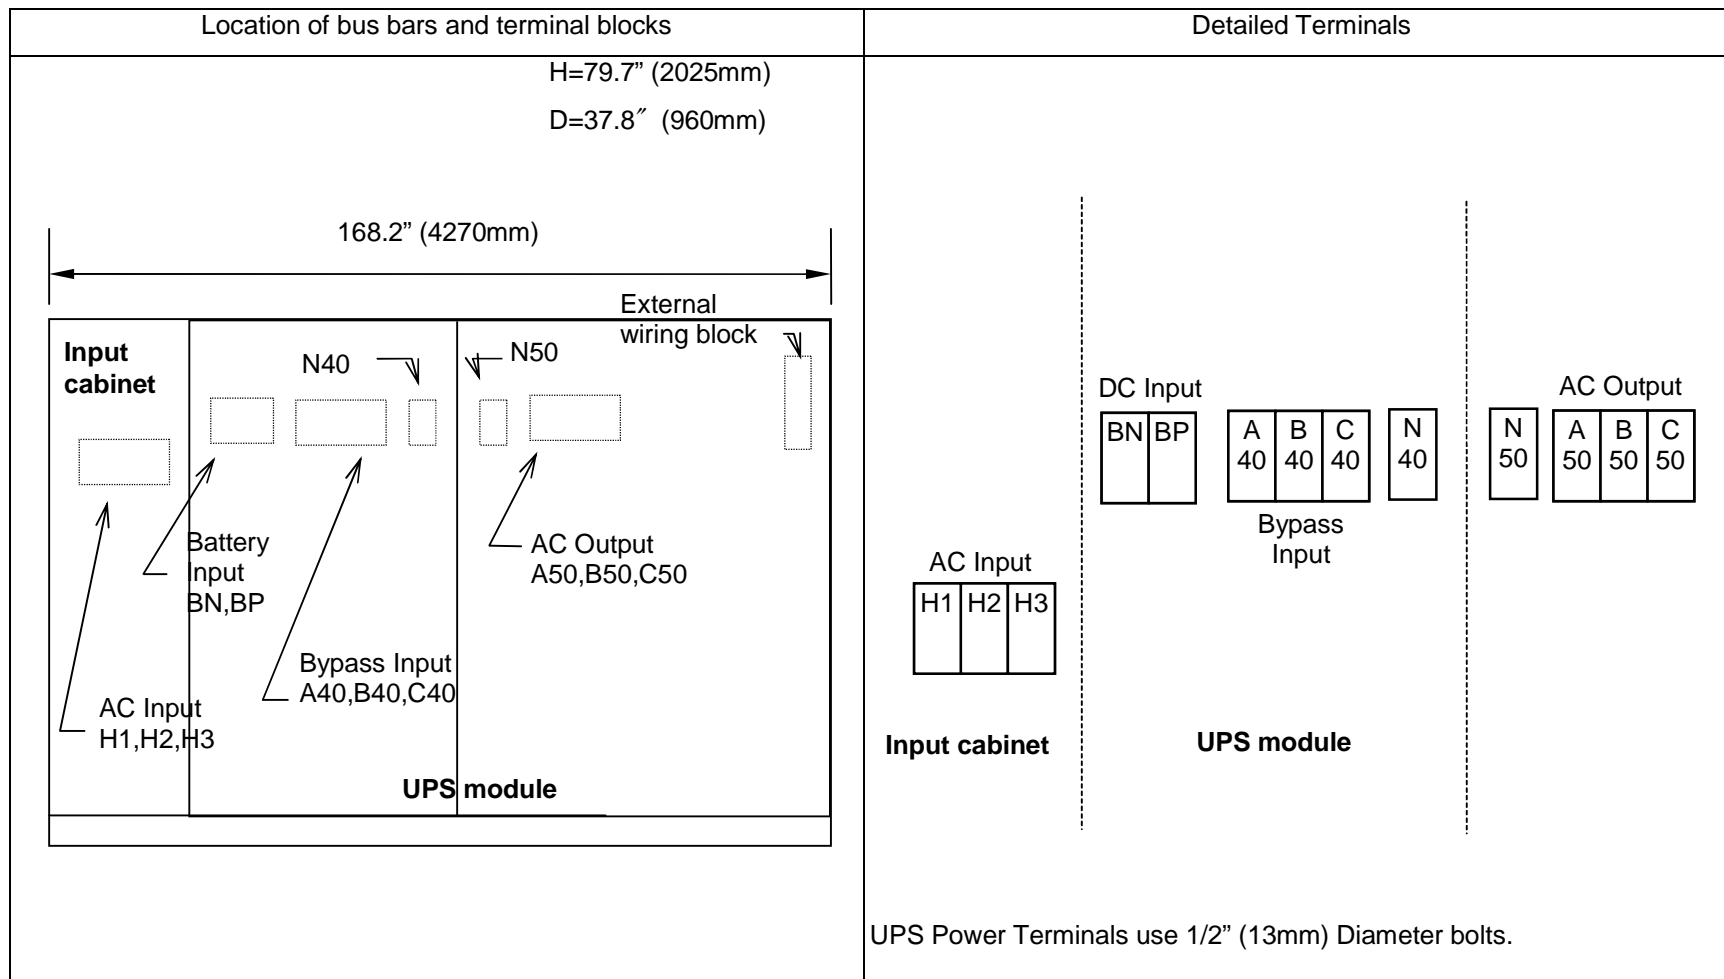


FIGURE 3.2-f-2 Diagram of Power Wire & Control Wire Inter-Connect (500kVA, 750kVA UPS, Input voltage 600Vac)

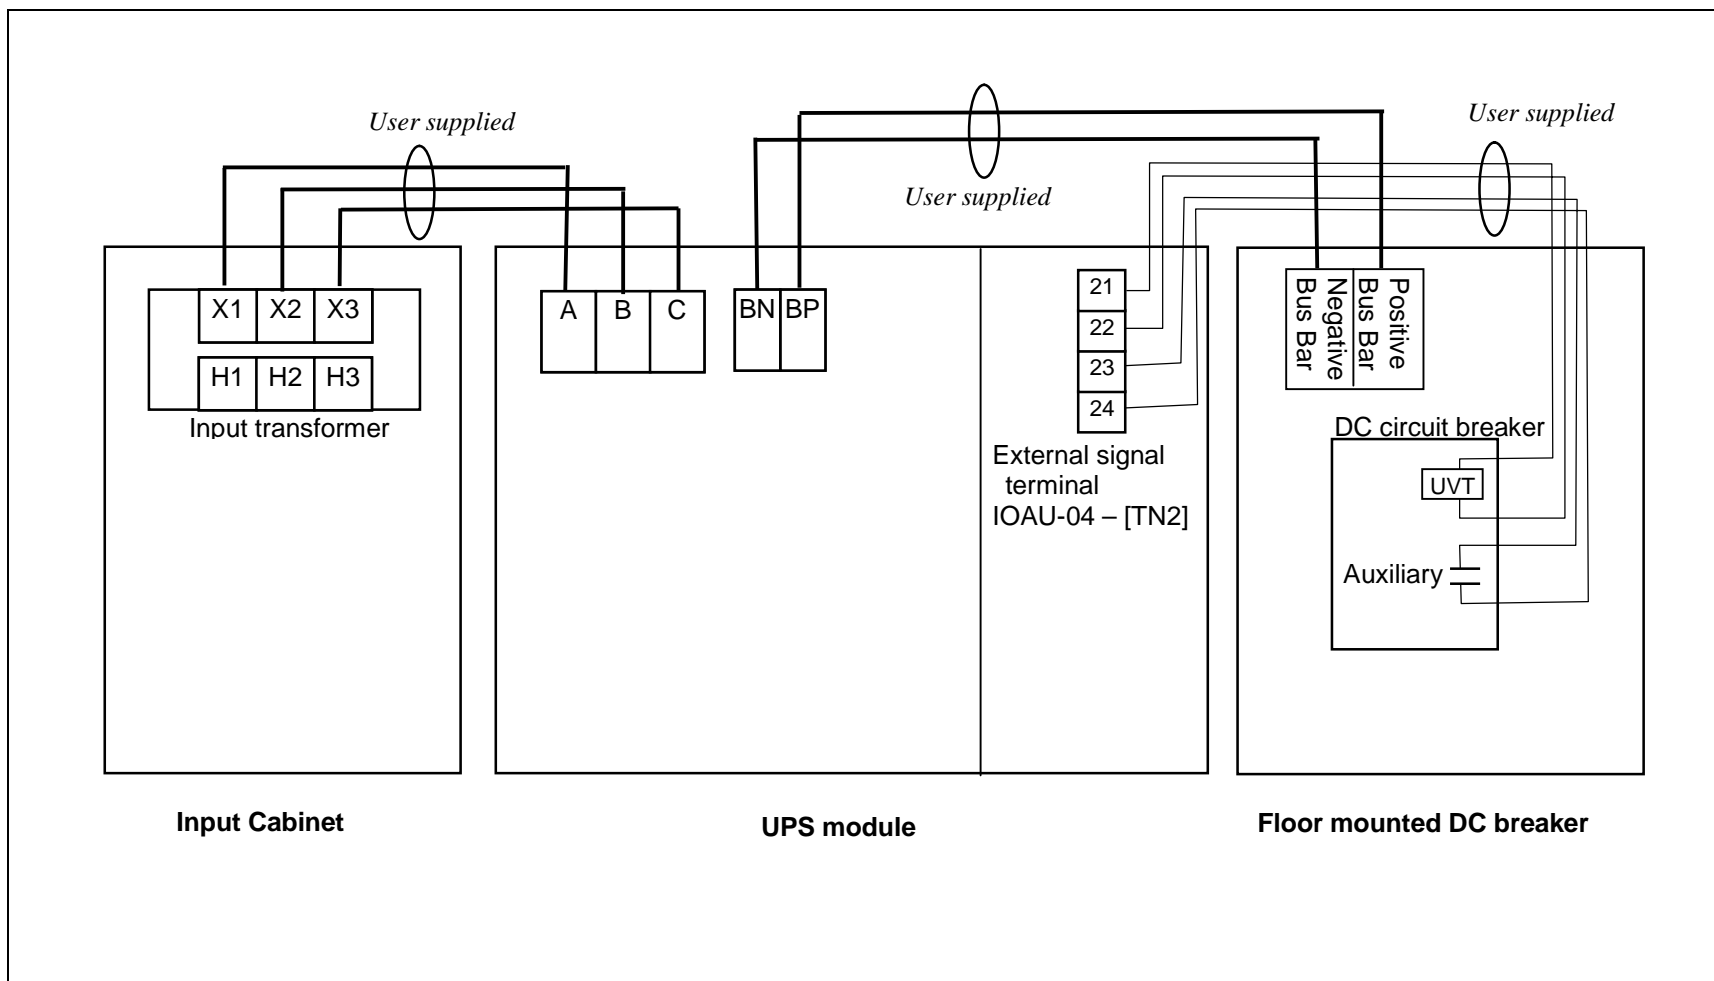


FIGURE 3.3-a Diagram of Rectifier Cabinet & Inverter Cabinet Inter-Connect 1 (500kVA, 750kVA UPS)

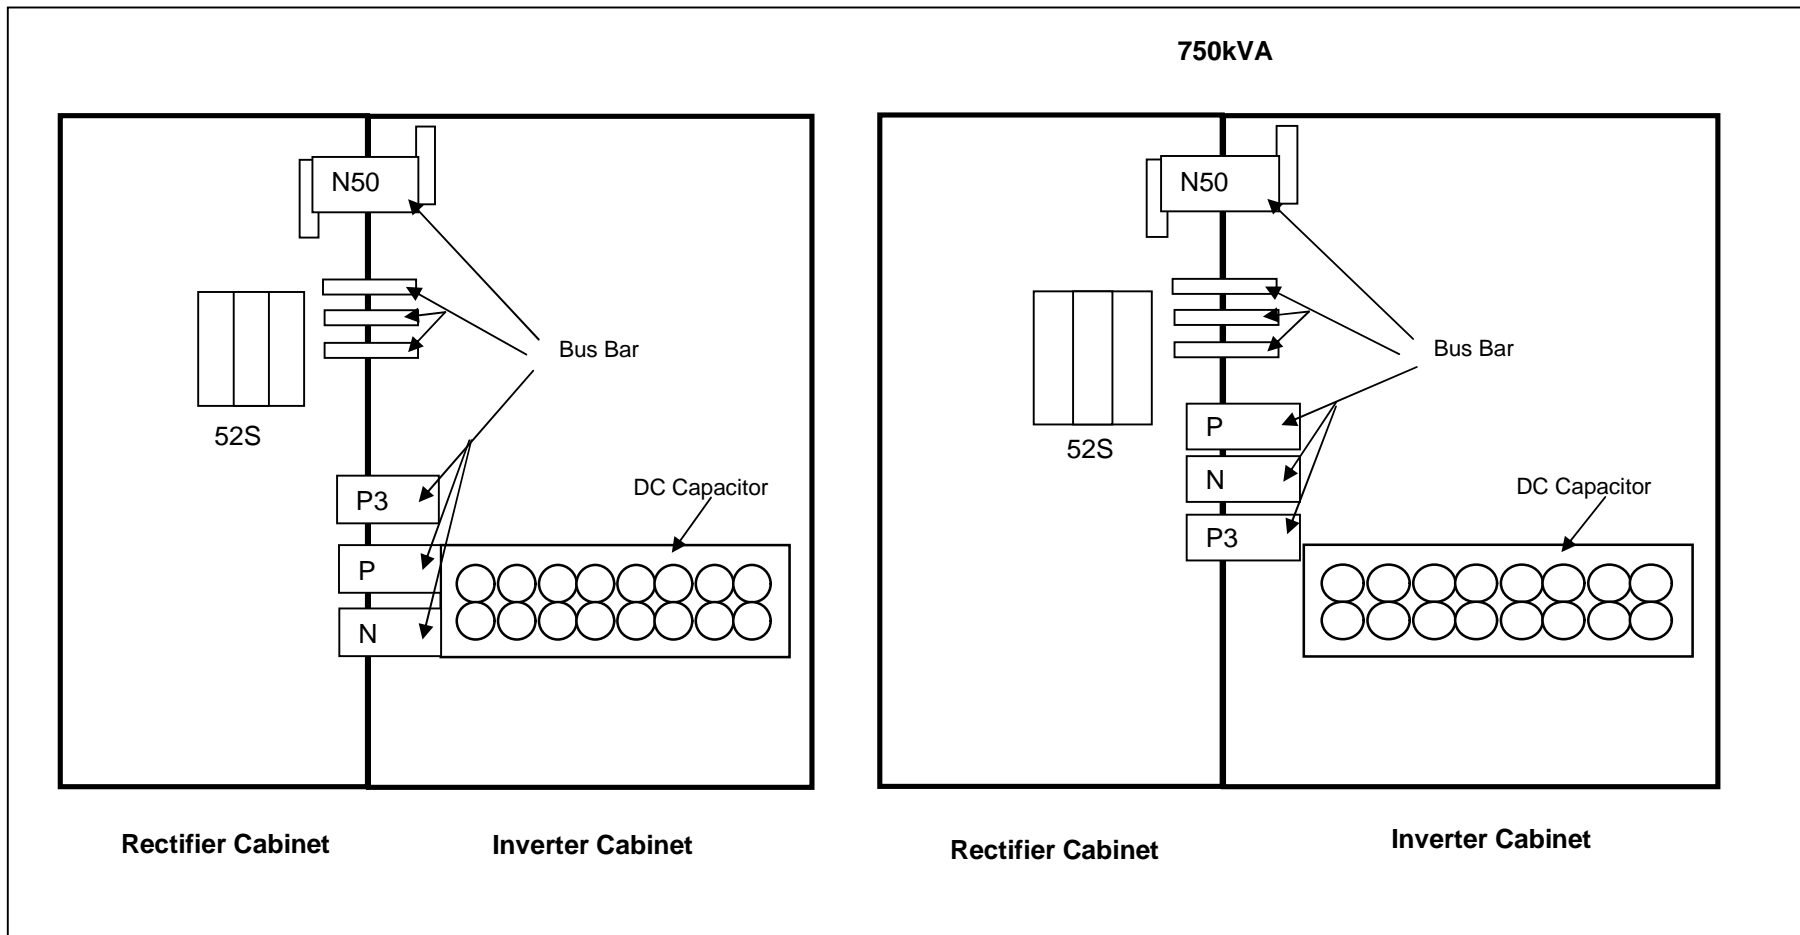


FIGURE 3.3-b Diagram of Rectifier Cabinet & Inverter Cabinet Inter-Connect 2 (500kVA, 750kVA UPS)

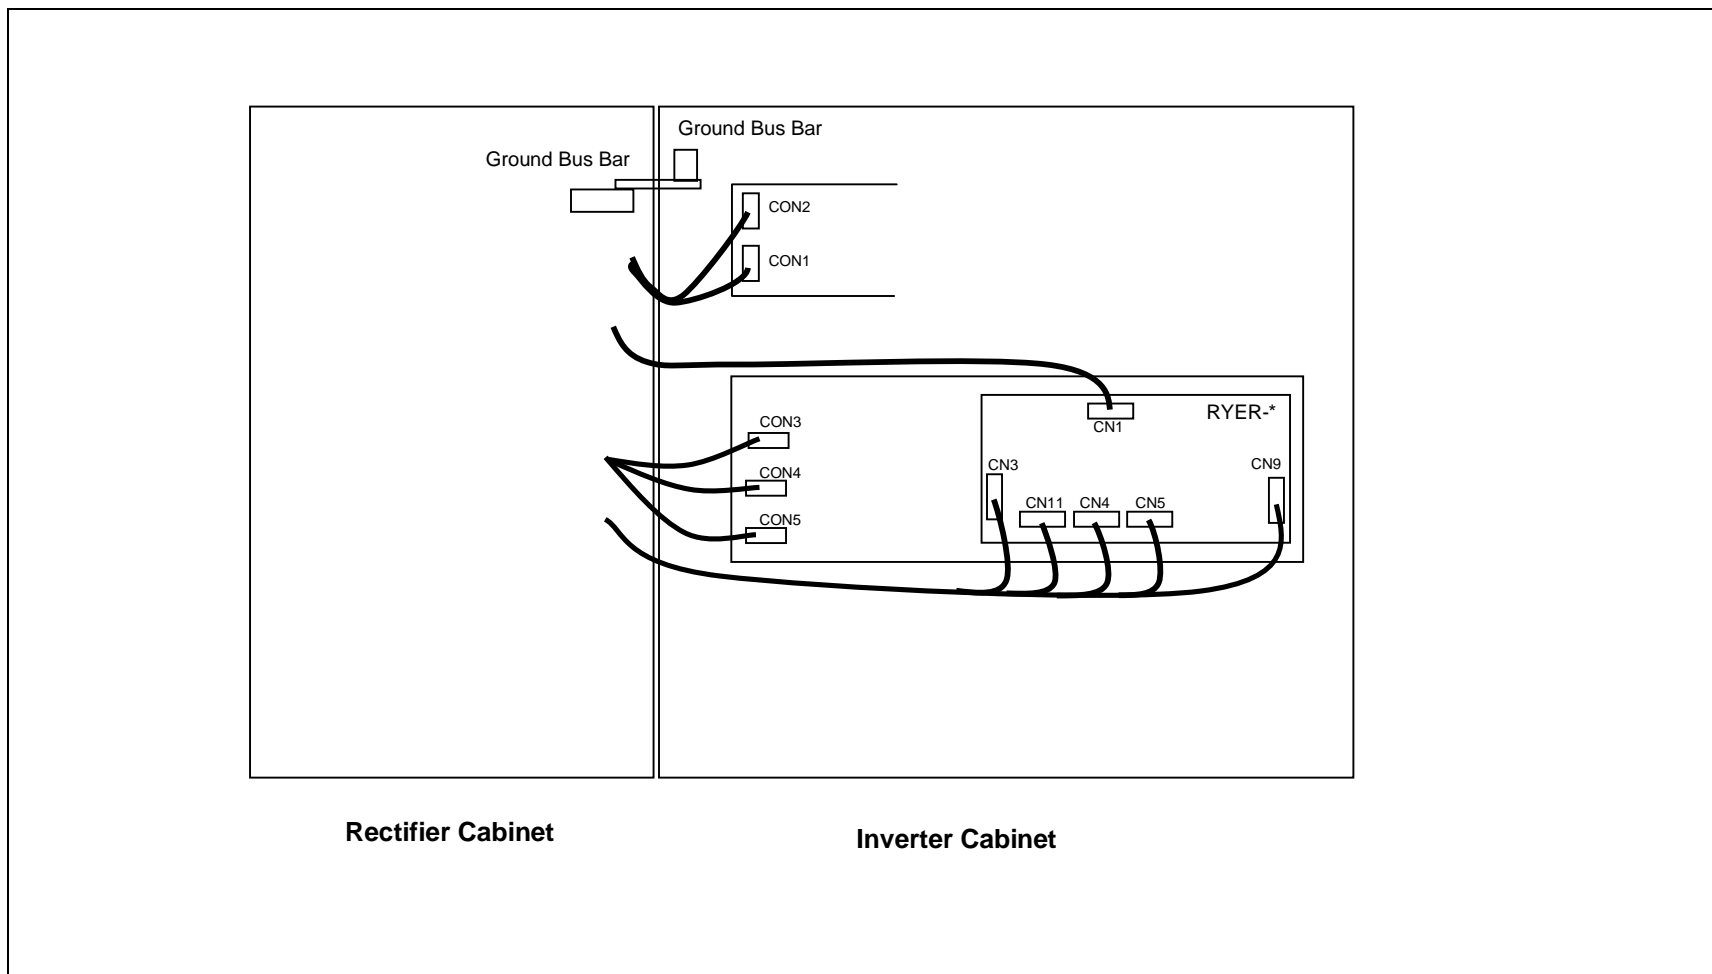


FIGURE 3.4-a Diagram of Power Wire Connect (Parallel connection)

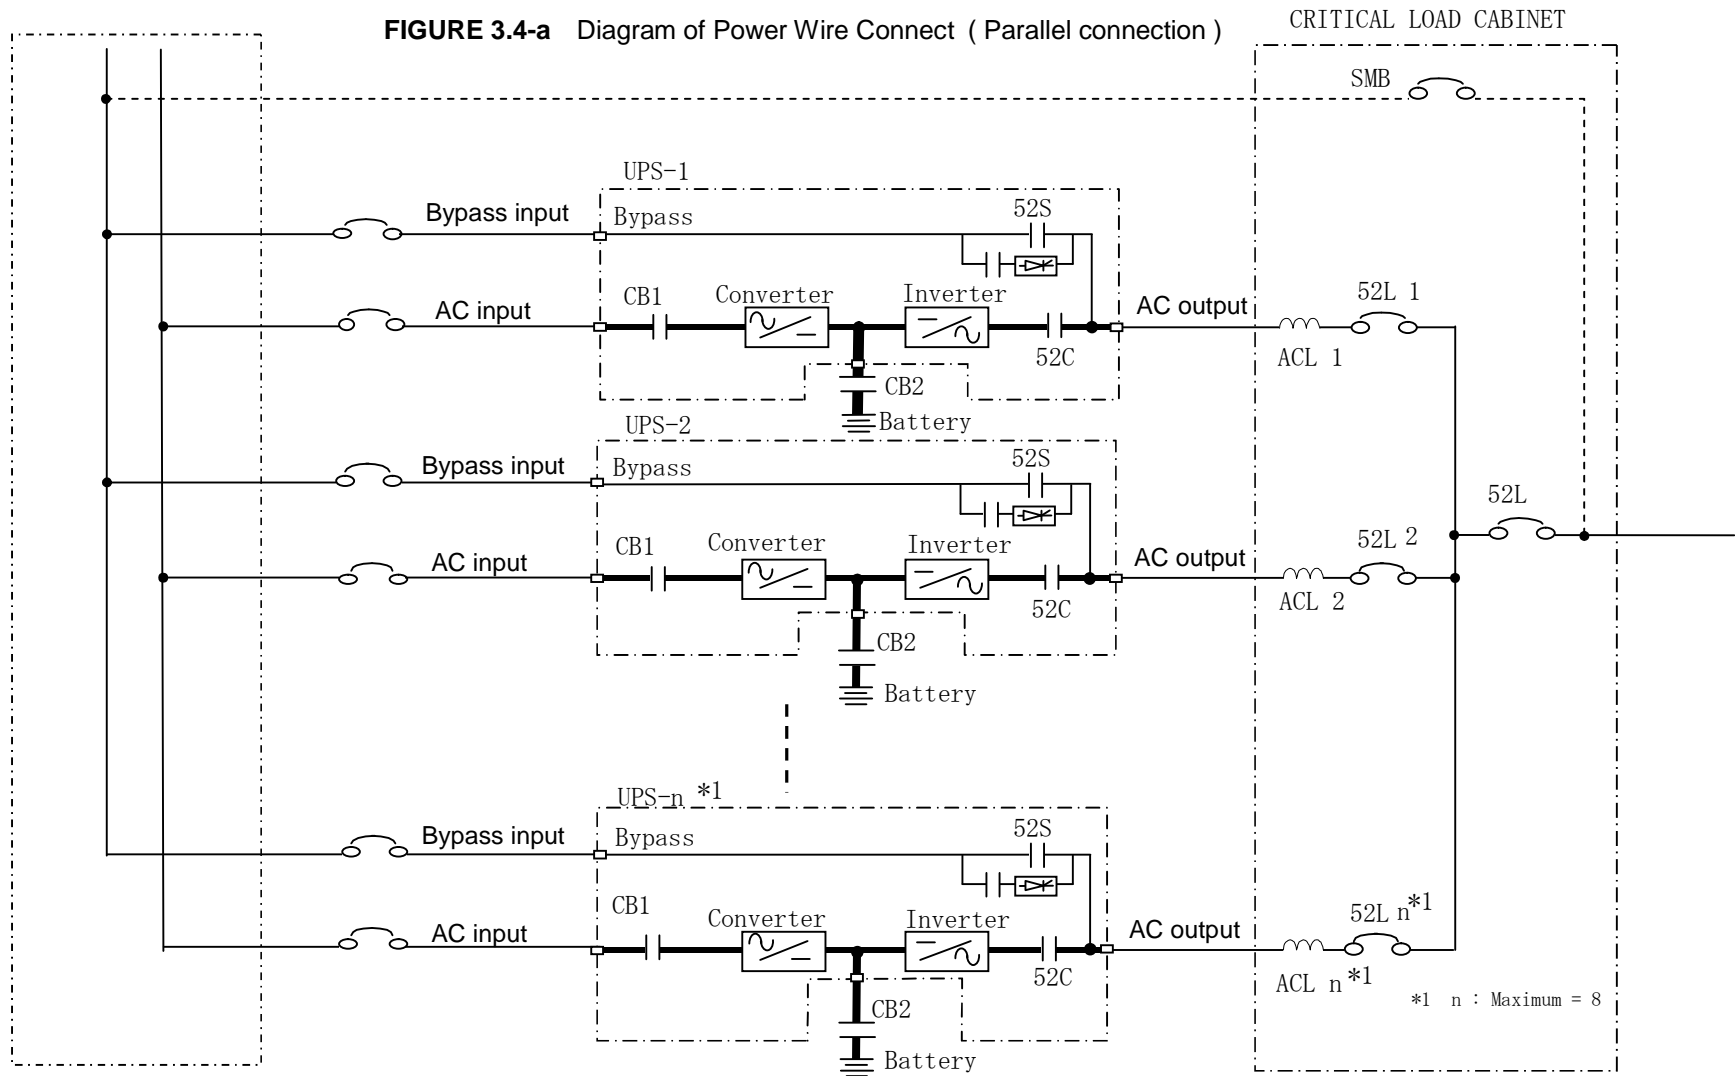


FIGURE 3.4-b Diagram of Power Wire & Control Wire Connect (Parallel connection)


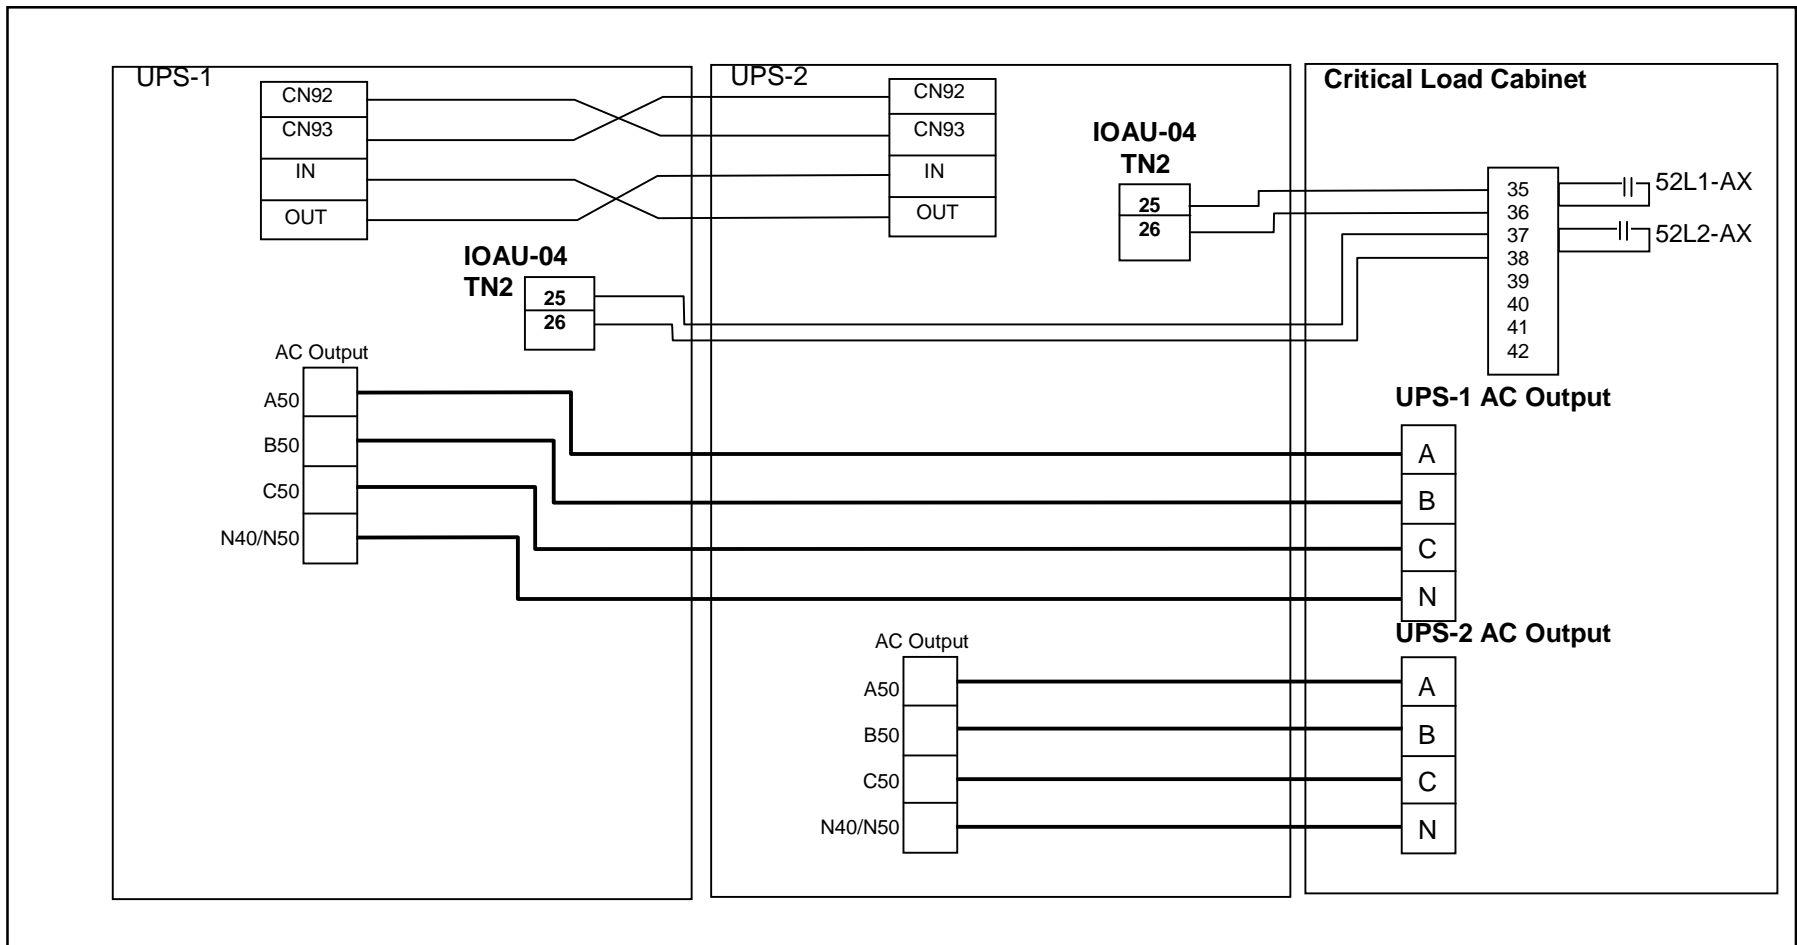


FIGURE 3.4-c Diagram of Power Wire & Control Wire Connect (Parallel connection)

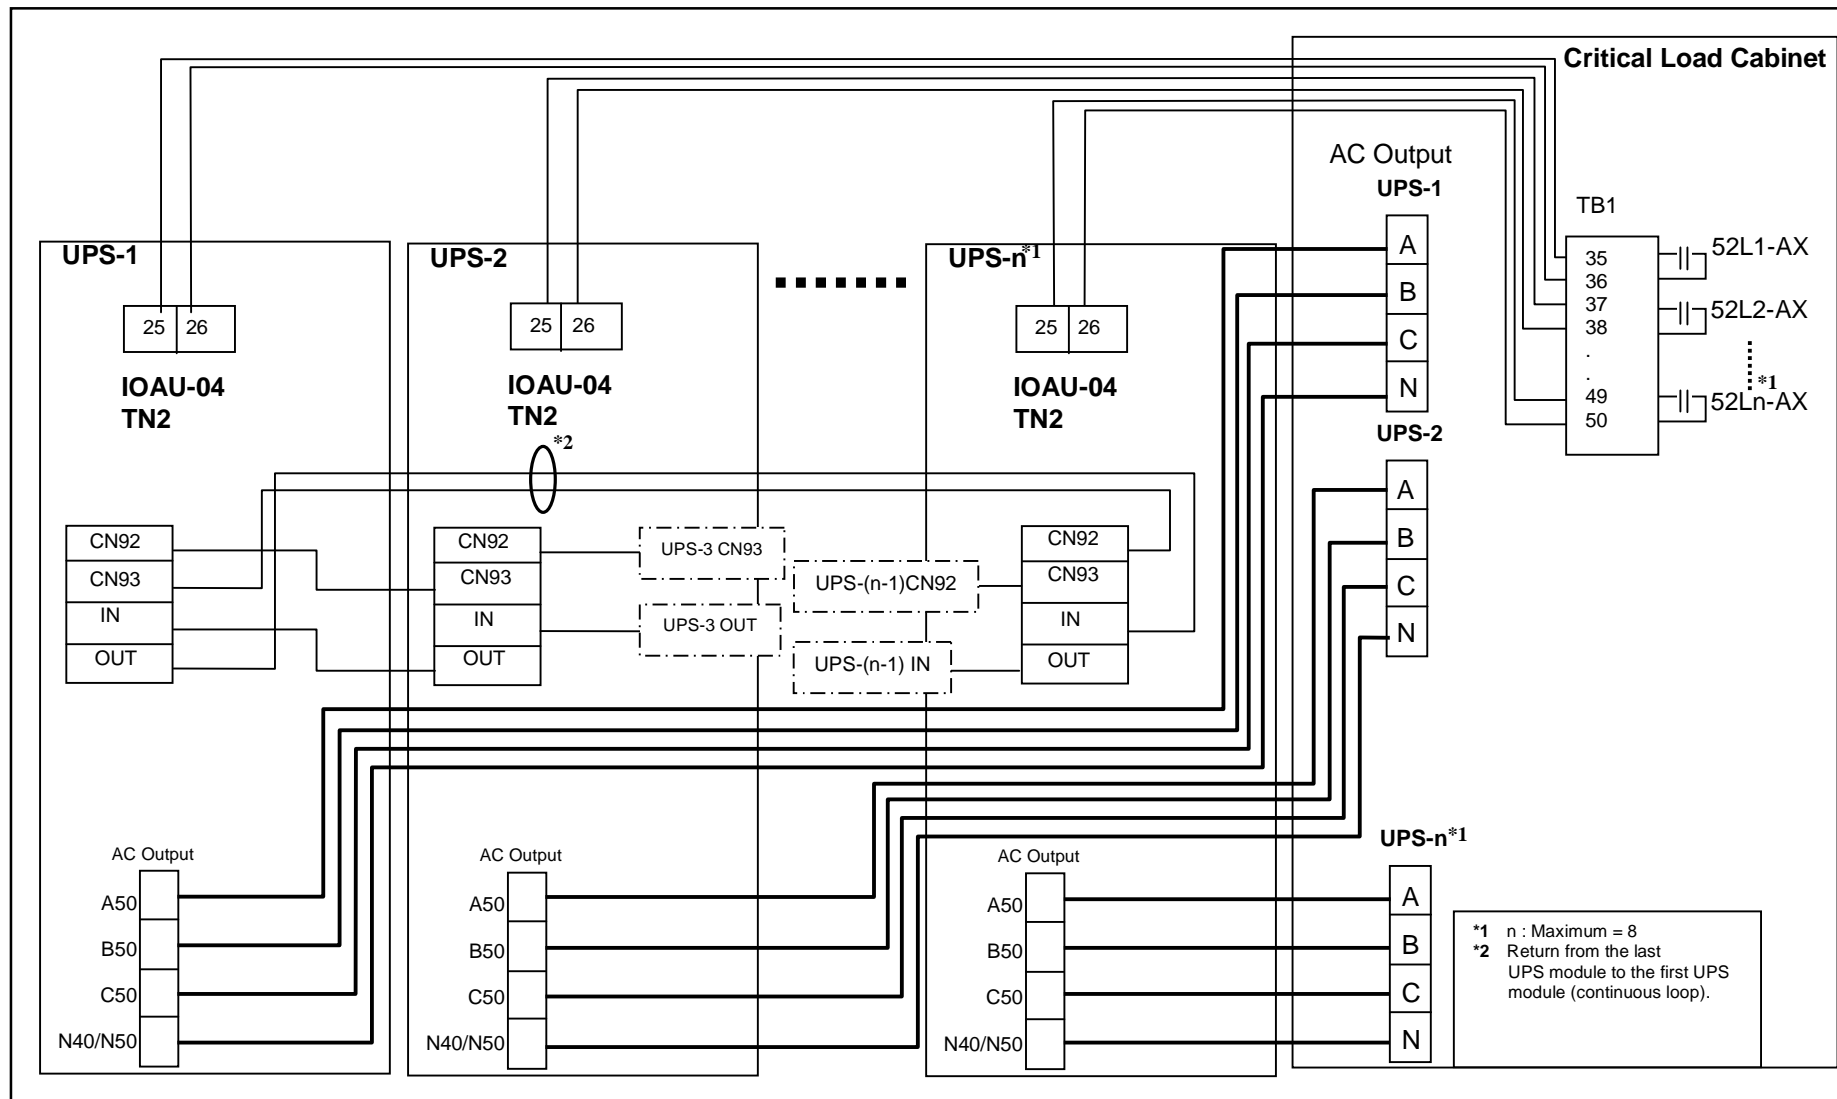

3.4 OPERATING PROCEDURES

For MMS, Refer to section “D) MMS Start-up Procedure”.

A) Start-up Procedure

- a.) Verify that the External Bypass Input Circuit Breaker for each unit is closed
(Breaker is user supplied.)
- b.) If a dual source is feeding the UPS, close the External AC Rectifier Input Circuit Breaker manually (user supplied).

Start-up of UPS


1. Verify that Control Circuit Breakers (CPM) is closed.
(When Inverter is stopped, the Control Circuit Breaker is not normally opened)
2. The pre-charging cycle will begin and Input Contactor (CB1) will close automatically.
3. Close Battery Disconnect Circuit Breaker (CB2).
4. The inverter can now be started.



Note: When "REMOTE OPERATION MODE" is displayed on the LCD panel, the inverter start operation can only be performed remotely. If local inverter start operation is required (at the UPS), select "LOCAL" in "Remote/Local" selection in setup page. Select "LOCAL" mode for the purpose of this start up procedure.

5. On the LCD panel, select "START/STOP MENU" and press the "START" key.
6. The Inverter will start within 5 seconds. Start up is complete.

FIGURE 3.5-a Start-up Procedure

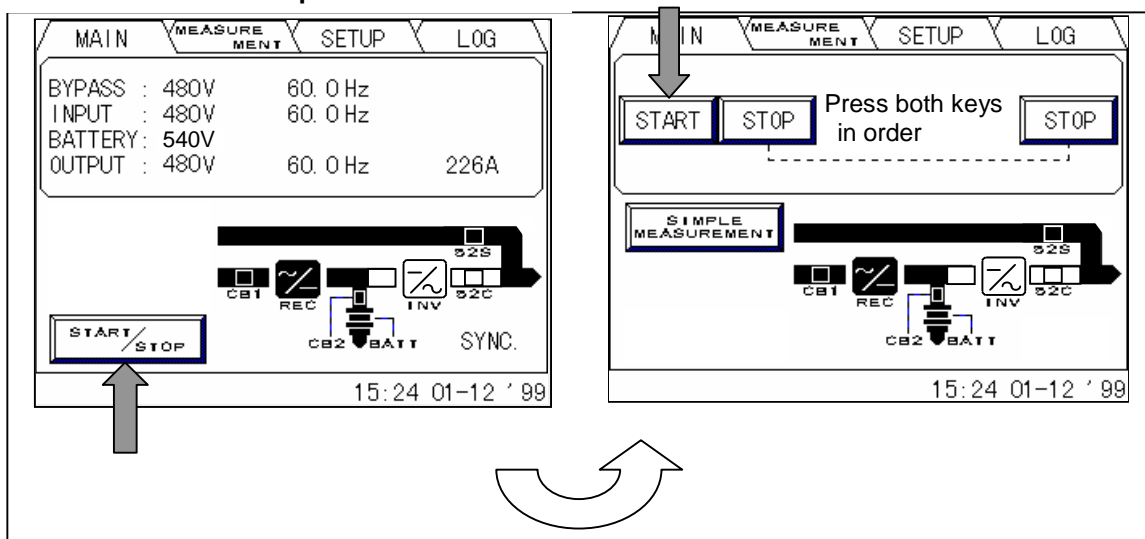

B) Shut-down Procedure

If a total UPS shutdown is required, verify that the critical load is OFF.

Shut-down of UPS

1. Press the "START/STOP MENU" from the Main Menu on the LCD.




Note: When "REMOTE OPERATION MODE" is displayed on the LCD panel, the inverter stop operation can only be performed remotely. If local inverter stop operation is required (at the UPS), select "LOCAL" in "Remote/Local" selection in setup page. Select "LOCAL" mode for the purpose of this stop procedure.

2. Press both "STOP" keys in order on the LCD.
(First press "STOP" key on the left, then press "STOP" key on the right.)
3. In general, only the Inverter will be stopped and the Rectifier will remain energized to charge the batteries.

Opening the user supplied External Input AC Circuit Breaker (if dual source used), the External Bypass Input Circuit Breaker and the DC Disconnect Circuit Breaker, CB2, will shut down the load.

4. If stopping both the Rectifier and Charger is required, open the Battery Disconnect circuit breaker (CB2) manually.
5. If a dual source is feeding the UPS, open the External AC Rectifier Input Circuit Breaker (user supplied) manually.
6. If turning off all power to the critical load is desired, open the External Bypass Input Circuit Breaker (user supplied) manually.

FIGURE 3.5-b Shut-down Procedure

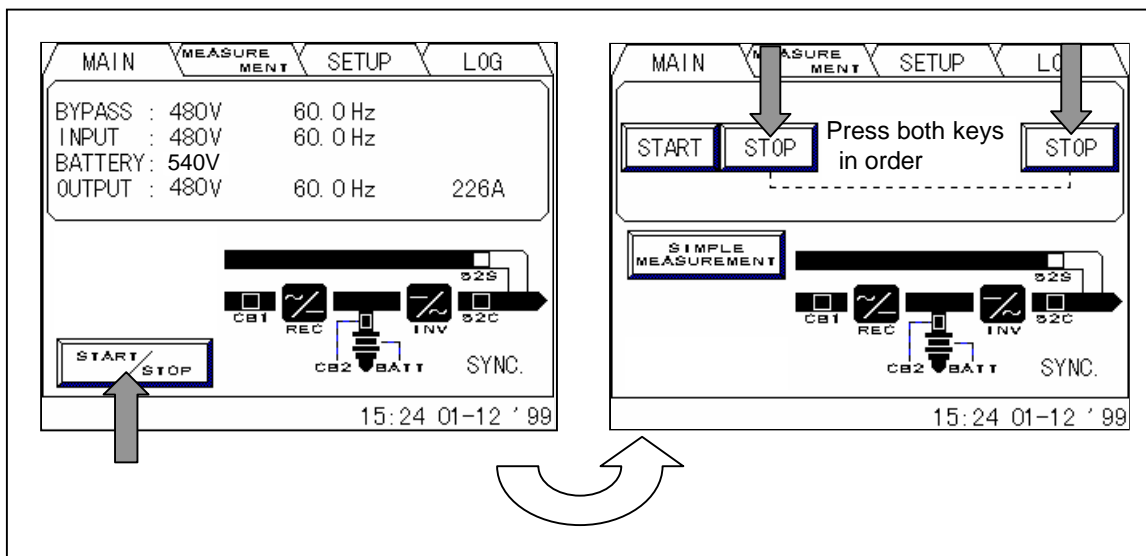

C) Bypass Operation Procedure

UPS

1. Check for "SYNC" on the LCD.
2. Press the "START/STOP MENU" from the LCD Main Menu.
3. Press the "STOP" key on the LCD.

** Transfer from bypass to inverter.

UPS

1. Press the "START/STOP MENU" from the LCD Main Menu.
2. Press the "START" key on the LCD.



Note: When "REMOTE OPERATION MODE" is displayed on the LCD panel, the inverter start or stop operation can only be performed remotely. If local inverter start or stop operation is required (at the UPS), select "LOCAL" in "Remote/Local" selection in setup page. Select "LOCAL" mode for the purpose of this stop procedure.

D) MMS Start-up Procedure

- a) Verify that Critical Load Cabinet (CLC) Circuit Breaker SMB is closed.
- b) Verify that CLC System Output Circuit Breaker 52L is open
- c) Verify that CLC UPS Circuit Breakers 52L1, 52L2...and 52Ln are closed.

Start-up of UPS-1

1. Verify that Control Circuit Breakers (CPM) is closed.
(When Inverter is stopped, the Control Circuit Breaker is not normally opened)
2. The pre-charging cycle will begin and Input Contactor (CB1) will close automatically.
3. Close Battery Disconnect Circuit Breaker (CB2).
4. The inverter can now be started.



Note: When "REMOTE OPERATION MODE" is displayed on the LCD panel, the inverter start operation can only be performed remotely. If local inverter start operation is required (at the UPS), select "LOCAL" in "Remote/Local" selection in setup page. Select "LOCAL" mode for the purpose of this start up procedure.

5. On the LCD panel, select "START/STOP MENU" and press the "START" key.
6. The Inverter will start within 5 seconds. Start up is complete.

Start-up of next UPS

1. The next UPS can be started in the same way as UPS-1.
2. When all UPS in MMS are started, the MMS system UPSs will simultaneously transfer from UPS MMS Bypass Operation to UPS MMS inverter Operation.
3. Verify there are no alarms on each UPS LCD and CLC LCD (if available)
Any steps to verify correct UPS MMS Inverter Operation.


Transfer from UPS MMS Inverter Operation To UPS MMS Bypass Operation

1. Transfer MMS system to UPS MMS Bypass Operation on CLC LCD (if available) or Transfer each UPS to bypass individually

Transfer of Load From Maintenance Bypass To inverter

1. Verify UPS MMS system is in UPS MMS Bypass Operation.
2. Transfer load from CLC Maintenance Bypass Circuit Breaker (SMB) to system Output Circuit Breaker (52L) per MMS CLC Maintenance Mode Interlock Operating Procedure, Part B.
3. Transfer from UPS MMS Bypass Operation to UPS MMS Inverter Operation from CLC LCD "System Bypass Operation Screens" if available or by starting each Individual UPS from UPS LCD, select "START/STOP MENU" and press "START" key.
4. After all UPS are ready to transfer to inverter all UPSs will simultaneously transfer from internal bypass to inverter.

4.0 RESPONSE TO UPS FAILURE

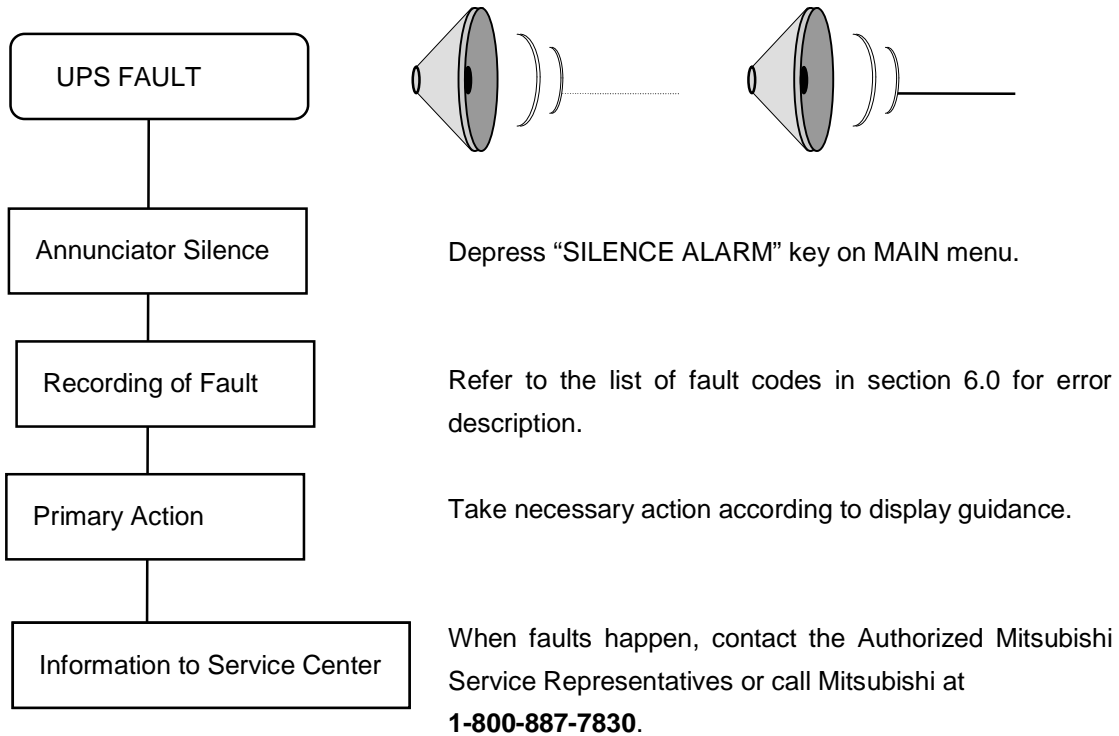

Note

The error code indicated on the LCD display panel when an UPS alarms is very important. In order to reduce repair time, please include this information, along with the operation and load status for all correspondence to Mitsubishi field service group.

5.0 PARTS REPLACEMENT

Contact Mitsubishi Electric Power Products, Inc. or its authorized service representatives on all issues regarding the replacement of parts.

A) Battery

Battery lifetime may vary according to the frequency of use and the average ambient operating temperature. The end of battery life is defined as the state of charge resulting in an ampere-hour capacity less than, or equal to, 80% of nominal capacity. Replace battery if its capacity is within this percentage.

B) UPS Component Parts

Contact Mitsubishi Electric Power Products, Inc. or its authorized service representatives for a complete parts replacement schedule. Recommended replacement time interval varies with operating environment.

Contact Mitsubishi Electric Power Products, Inc. or its authorized service representatives for application specific recommendations.

6.0 FAULT CODES

This section covers fault codes, their description and required action.

At time of error :

- A) Verify and record the occurrence of the alarm. Note details of alarm message displayed on the LCD display panel.

Contact Mitsubishi Electric Power Products, Inc. at 1-800-887-7830.

- B) If a circuit breaker (MCCB) has tripped, depress the toggle to reset the breaker before closing it again.

Failure Code List
Table 6.1 Fault Code

Note 9 Code indication	Status message	Contents	Guidance	Note 1 Buzzer	Note 2 External send-out contact	Note 3 Failure lamp
UF003	CONVERTER ABNORMAL	Preliminary charge impossible	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF006	CONVERTER ABNORMAL	Mixed operation (60 minutes)	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF055	CONVERTER ABNORMAL	Mixed operation (1 minute)	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF059	INPUT CIRCUIT ABNORMAL	Input circuit abnormality	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF102	DC OVERVOLTAGE	Over voltage of DC voltage	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF103	DC UNDERVOLTAGE	Low voltage of DC voltage	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF108	CHOPPER OVERCURRENT	Chopper output overcurrent	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF109	DC VOLTAGE UNBALANCED	DC voltage unbalanced between positive and negative	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF151	DC VOLTAGE ABNORMAL	Does not return to float voltage after power supply is resumed (24 hours)	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF152	DC VOLTAGE ABNORMAL	Does not return to equalizing voltage after power supply is resumed	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF153	CB2 ABNORMAL	Battery disconnect circuit breaker CB2 has tripped.	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF156	CB2 TRIPPED(BATTERY OVERTEMP.)	Battery temperature abnormality (UF157) lasted a long time (Note 5)	CHECK BATTERY	[1]	Minor	Flicker
UF157	BATTERY OVERTEMPERATURE	Battery temperature abnormality	CHECK BATTERY	[1]	Minor Note 4	Flicker
UF161	CB2 TRIPPED(DC VOLT. ABNORMAL)	Does not return to float voltage after power supply is resumed (48 hours) (Note 5)	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF162	BATTERY ABNORMAL	Battery abnormal detected by battery self test.	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF163	BATTERY VOLTAGE ABNORMAL	Battery voltage abnormality	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF165	GATE FAULT (CHOPPER)	IGBT module (Chopper) damaged	CALL SERVICE ENGINEER	[2]	Major	Lit on

UF166	GATE FAULT (A-UNIT)	IGBT module (A-Unit) damaged	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF167	GATE FAULT (B-UNIT)	IGBT module (B-Unit) damaged	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF168	GATE FAULT (C-UNIT)	IGBT module (B-Unit) damaged	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF170	VDB SENSOR ABNORMAL	Battery voltage sensor abnormality	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF201	INVERTER OVERVOLTAGE	Output overvoltage during inverter power supply (+ 15%)	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF202	INVERTER UNDERVOLTAGE	Output low voltage during inverter supply (-15%)	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF203	INVERTER OVERCURRENT	Inverter output overcurrent	CALL SERVICE ENGINEER	[2]	Major	Lit on
UP204	OUTPUT CIRCUIT ABNORMAL	Cross current fell out of 30%	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF209	52C ABNORMAL	52C not turned ON	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF210	52C ABNORMAL	52C not turned OFF	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF213	INV. OR CONV. OVERTEMPERATURE	Overheating of main circuit parts	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF214	COOLING FAN ABNORMAL	Abnormality of cooling fan inside panel	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF255	52C ABNORMAL	52C turned OFF during inverter power supply	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF256	OUTPUT VOLTAGE ABNORMAL	Inverter output voltage fell out of +/- 5%	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF257	52C ABNORMAL	52C not turned OFF when manual transfer	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF258	LOAD ABNORMAL	More than 4 overcurrents for 10 minutes	CHECK LOAD	[1]	Minor	Flicker
UF259	Output voltage bus abnormal	Inverter output voltage bus abnormality	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF260	LOAD SHORT	After UA810 occurred, Bypass Abnormal occurred within 1 second. (#1)	CHECK LOAD	[1]	Minor	Flicker
UF301	UPS CONTROL CIRCUIT ERROR	Control microcomputer abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF302	UPS CONTROL CIRCUIT ERROR	Control microcomputer abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF303	UPS CONTROL CIRCUIT ERROR	Control microcomputer abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF304	UPS CONTROL CIRCUIT ERROR	Parallel control circuit abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on

UF305	UPS CONTROL CIRCUIT ERROR	Control clock abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF306	UPS CONTROL CIRCUIT ERROR	Control power source circuit abnormality	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF309	INVERTER VOLTAGE ABNORMAL	Inverter output voltage abnormality before inverter power supply	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF315	UPS CONTROL CIRCUIT ERROR	Control clock lost	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF352	CONTROL POWER SUPPLY ABNORMAL	Control circuit abnormality	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF402	52S ABNORMAL	52S not turned OFF, or 52S turned OFF without any command	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF403	CB3 ABNORMAL	CB3 not turned OFF (#2)	CALL SERVICE ENGINEER	[2]	Major	Lit on
UF451	52S ABNORMAL	52S not turned ON, or 52S turned ON without any command when manual transfer	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF452	CB3 ABNORMAL	CB3 open	CALL SERVICE ENGINEER	[1]	Minor	Flicker
UF453	52L OPERATION ERR.	52L operated abnormality	CHECK 52L	[2]	Major	Lit on
UA801	AC INPUT VOLTAGE OUT OF RANGE	AC input voltage fell out of +/- 15% range	CHECK INPUT POWER SOURCE	[1]	Alarm	-
UA806	INVERTER OVERLOAD > 100%	Overload exceeded 105% (Note 7)	WARNING : DECREASE LOAD	[1]	Alarm	-
UA808	INVERTER OVERLOAD > 125%	Overload exceeded 125% (Note 7)	WARNING : DECREASE LOAD	[1]	Alarm	-
UA809	INVERTER OVERLOAD > 150%	Overload exceeded 150% (Note 7)	WARNING : DECREASE LOAD	[1]	Alarm	-
UA810	INVERTER OVERLOAD	Momentary over-current during Inverter power.	WARNING : DECREASE LOAD	[1]	Alarm	-
UA811	OVERLOAD TRANS.	Overload transfer	-	[1]	Alarm	
UA812	BYPASS VOLTAGE OUT OF RANGE	Bypass voltage fell out of +/- 20% range	CHECK BYPASS INPUT	[1]	Alarm	-
UA813	BYPASS PHASE ROTATION ERROR	Phase rotation is inverted when bypass voltage is normal	CHECK BYPASS INPUT	[1]	Alarm	-
UA814	BYPASS FREQUENCY OUT OF RANGE	Bypass frequency fell out of inverter synchronization follow-up range	CHECK BYPASS INPUT	[1]	Alarm	-

UA817	EMERGENCY STOP ACTIVATED	Emergency stop applied	-	-	Alarm	-
UA819	REMOTE START BUTTON ABNORMAL	There is an error with the remote start switch.	CALL SERVICE ENGINEER	[1]	Alarm	-
UA820	REMOTE STOP BUTTON ABNORMAL	There is an error with the remote stop switch.	CALL SERVICE ENGINEER	[1]	Alarm	-
UA824	CB2 OPEN	Battery disconnect circuit breaker CB2 turned OFF	TURN ON CB2	[1]	Alarm	-
UA831	EMERGENCY BYPASS SWITCH ON	Emergency bypass switch turned to <Emergency>	-	[1]	Alarm	-
UA834	BATTERY DEPLETED INV. STOPPED	DC voltage dropped below discharge end during inverter operation	-	-	Alarm	-
UA841	CONVERTER OPE. PROHIBITION	Converter operation interlock applied	-	-	Alarm	-
UA842	OUTPUT CIRCUIT ABNORMAL	Load bus voltage sensor abnormality	-	-	Alarm	-

#1: Output circuit may be shorted.

#2: Check the CB3 and Bypass Thyristors.

- (Note 1) Audible annunciator: [1] intermittent sound, [2] continuous sound.
- (Note 2) 1) "Major" is defined as major failure. Inverter transferred to the static bypass line;
2) "Minor" is defined as a minor failure. UPS continues to operate normally, but cause of alarm must be identified;
- (Note 3) Indicates one of two possible LED illumination patterns - continuously on (lit) or intermittent (flicker).
- (Note 4) External send-out possible by option setting.
- (Note 5) Trips the battery breaker CB2.
- (Note 6) For other than sealed-type battery.
- (Note 7) If the specified time elapses, will transfer to the bypass power supply.
- (Note 8) Shows only when corresponding option settings are made.
- (Note 9) Code indication means:


UA+++ -----	Alarm
UF+++-----	Failure
U%0++-----	Rectifier circuit failure
U%1++-----	DC circuit failure
U%2++-----	Inverter circuit failure
U%3++-----	Control circuit failure
U%4++-----	Bypass system failure
U%8++-----	Alarm
U%+00 - U%+49 -----	Major failure
U%+50 - U%+99 -----	Minor failure

- *) "+" denotes any numeral from 0 to 9
*) "%" denotes either "A" or "F"

7.0 WARRANTY & OUT OF WARRANTY SERVICE

The Mitsubishi Electric UPS Division Service Department has many Authorized Service Centers place strategically throughout the US, Canada and Latin America. For both in warranty and out of warranty service, please contact Mitsubishi Electric Power Products, Inc. at (847) 478-2100. To register your UPS for warranty purposes, please complete the warranty registration form and fax it to the Mitsubishi Electric UPS Division Service Department fax line shown on the registration form. (Next page)

For warranty purposes, it is essential that any and all service work that may be required on your Mitsubishi brand UPS equipment is performed by a Mitsubishi Electric Authorized Service Center. The use of non-authorized service providers may void your warranty.

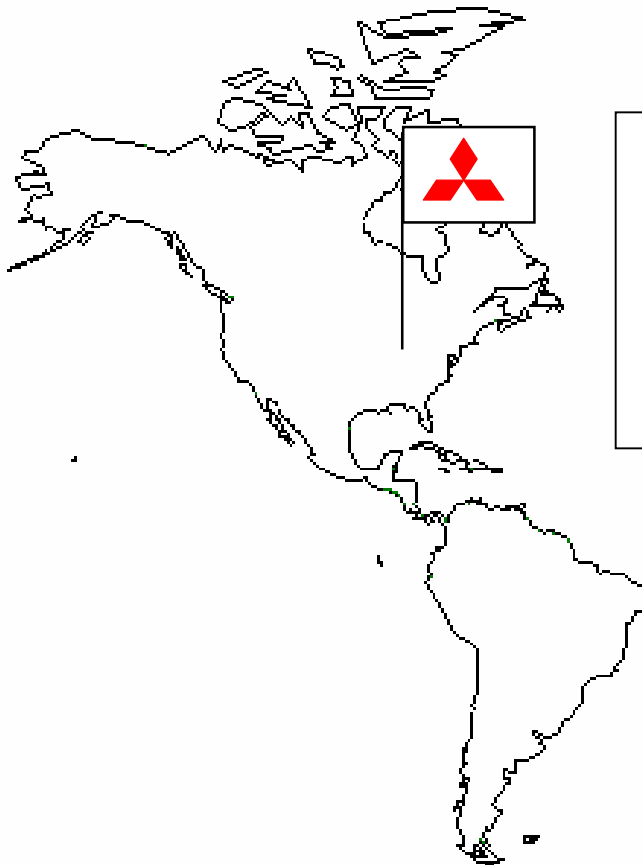**Mitsubishi Electric Power Products, Inc**

UPS Division Service Department

500 Corporate Woods Parkway,

Vernon Hills, Illinois 60061, USA

Phone: (847) 478-2100

Fax: (847) 478-2290



Mitsubishi Electric Power Products, Inc.
 UNINTERRUPTIBLE POWER SUPPLIES
 500 Corporate Woods Parkway, Vernon Hills, IL 60061 Phone: (847) 478-2100, Fax: (847) 478-2290

UPS Warranty Registration

 Register UPS for Warranty

 Address Change

To validate the Warranty on your UPS this form must be filled out completely by Customer and returned.

CUSTOMER INFORMATION			
Your Name:		Job Title:	
Company Name:			
Division / Department:			
Address:			
City:		State:	Zip Code:
Country:		Province:	
Business Phone:		Ext:	Fax:
E-Mail:		Internet Address:	
UPS Model #:		Capacity (kVA):	UPS Serial #:
Start-Up Date: / /		Authorized Mitsubishi Service Company (if known):	
Signature:		Date: / /	

Which **ONE** of These Best Describes Your Organization's Primary Business Classification?

Number of Employees at This Location is:

- | | | |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> {Energy Producer}
<input type="checkbox"/> Utility
<input type="checkbox"/> Alternate Energy
<input type="checkbox"/> {Manufacturing Co.}
<input type="checkbox"/> OEM
<input type="checkbox"/> Process
<input type="checkbox"/> Consumer Goods
<input type="checkbox"/> Electronics
<input type="checkbox"/> Power Quality Equipment
<input type="checkbox"/> Commercial Business
<input type="checkbox"/> Electrical Contractor
<input type="checkbox"/> Healthcare
<input type="checkbox"/> Internet | <input type="checkbox"/> Education/Univ. Service
<input type="checkbox"/> {Service}
<input type="checkbox"/> Consulting
<input type="checkbox"/> Engineering
<input type="checkbox"/> Outsourcing
<input type="checkbox"/> Financial/Legal/Insurance
<input type="checkbox"/> {Government}
<input type="checkbox"/> Military
<input type="checkbox"/> Municipals
<input type="checkbox"/> Federal/State/Local
<input type="checkbox"/> Communications
<input type="checkbox"/> Distributors/Reps
<input type="checkbox"/> Other _____ | <input type="checkbox"/> 1 – 19 <input type="checkbox"/> 100 - 249 <input type="checkbox"/> 1000 or more
<input type="checkbox"/> 20 – 49 <input type="checkbox"/> 250 - 499
<input type="checkbox"/> 50 – 99 <input type="checkbox"/> 500 - 999

Overall how was Start-Up performed:
<input type="checkbox"/> Unsatisfactory <input type="checkbox"/> Satisfactory <input type="checkbox"/> Exceeded

Would you like to receive future product updates and news?
<input type="checkbox"/> Yes <input type="checkbox"/> No |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**After Start-Up has been done Fax completed Form to:
(847) 478-2290**

NOTE: PLEASE READ THE TERMS OF THIS LIMITED WARRANTY CAREFULLY PRIOR TO INSTALLATION AND START-UP OF YOUR NEW MITSUBISHI UNINTERRUPTIBLE POWER SUPPLY SYSTEM. FAILURE TO FOLLOW THESE PROCEDURES MAY VOID YOUR LIMITED WARRANTY!

**MITSUBISHI ELECTRIC POWER PRODUCTS, INC.
UNINTERRUPTIBLE POWER SUPPLY SYSTEM
(2033A/2033C/2033D/9700/9800A SERIES)
LIMITED WARRANTY POLICY AND PROCEDURES**

1. LIMITED WARRANTY: MITSUBISHI ELECTRIC POWER PRODUCTS, INC. ("MEPPI") warrants to the original end user that the 2033A/2033C/2033D/9700/9800A series Uninterruptible Power Supply Unit sold by MEPPI (the "Product") shall be free from defects in material and workmanship under normal use and service for a period of twenty four(24) months from the date of installation or thirty (30) months from the date of shipment of the Product, whichever comes first, the original end user (the "Warranty Period"). If MEPPI receives notice of any defects during the Warranty Period, MEPPI shall, at its option, repair or replace any defective parts, subject to the limitations and procedures described below.

A. LIMITATIONS. This Limited Warranty shall cover the Product only if all of the following conditions have been met:

- (1) If temporary on-site storage of the Product was required before installation, all prescribed storage requirements as set forth in MEPPI's published storage guidelines shall have been strictly followed.
- (2) MEPPI's UPS Divisions Service Department or a MEPPI Authorized Service Organization shall have inspected the installation site to determine correct application conditions and to perform any required inspections, calibrations and startup of the Product. Contact MEPPI at the number listed below to schedule startup of the Product.
- (3) This limited warranty does not include travel and related costs for Products installed outside the United States. Consult your local MEPPI representative for terms and conditions.

B. EXCLUSIONS. This Limited Warranty does not cover:

- (1) System batteries/battery plant and all other peripheral products and accessories not manufactured by MEPPI (including components or software) or the installation, operation, maintenance or service of such accessories. These items may be separately warranted by the manufacturer of the item in question.
- (2) Any Product whose serial number has been altered defaced or removed.
- (3) Any Product which has been damaged during shipment.
- (4) Product defects caused by installation, start-up, wiring, modification, alteration, repair, service or parts replacement except by MEPPI or an authorized MEPPI service representative. Contact MEPPI at the number below for a list of authorized service providers in your area.
- (5) Product defects caused by inadequate maintenance, misuse, physical abuse of the Product, accident, excessive stress or operation of the Product under abnormal environmental conditions or contrary to the Product's operating instructions.
- (6) Product defects caused by failure to follow the operational specifications or the handling and operational procedures prescribed in the Product Owner's Manual.
- (7) Service, repair or replacement of parts made necessary by any cause beyond MEPPI's control, including, but not limited to, fire, theft, lightning, acts of God, negligence, accident, excessive physical or electrical stress or operation under abnormal environmental conditions.
- (8) Products which have been decommissioned and/or relocated from the original installation site.

C. ADDITIONAL LIMITATIONS

- (1) Parts used for replacements are warranted for the longer of 90 days or the remainder of the original Warranty Period. All defective Product parts shall be the property of MEPPI upon replacement. MEPPI reserves the right to make any or all changes to the Products that it may deem necessary without prior notice to customer. Replacement parts may be new or reconditioned or refurbished.
- (2) THIS LIMITED WARRANTY IS EXCLUSIVE, AND NO OTHER WARRANTY WHETHER WRITTEN OR ORAL, IS EXPRESSED OR IMPLIED. MEPPI SPECIFICALLY DISCLAIMS ANY IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR ANY PARTICULAR PURPOSE, WHICH SHALL NOT BE APPLICABLE UNDER ANY CIRCUMSTANCES WHATSOEVER.
- (3) THIS LIMITED WARRANTY SHALL CONSTITUTE THE SOLE AND EXCLUSIVE REMEDY OF ALL PURCHASERS AND USERS OF THE PRODUCT. UNDER NO CIRCUMSTANCES SHALL MEPPI BE LIABLE FOR DAMAGES, WHETHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL BY REASON OF ANY DEFECTIVE PRODUCTS, BREACH OF THIS LIMITED WARRANTY, BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE OR STRICT LIABILITY) OR OTHERWISE. IN NO EVENT SHALL MEPPI BE LIABLE FOR ANY AMOUNT IN EXCESS OF THE PURCHASE PRICE PAID FOR ANY PRODUCT FOUND TO BE DEFECTIVE.

2. PROCEDURES

A. Direct all inquiries to:

MITSUBISHI ELECTRIC POWER PRODUCTS, INC.

Attention: UPS Division Service Department

500 Corporate Woods Parkway

Vernon Hills, Illinois 60061

Phone: (847) 478-2100

Fax: (847) 478-2290

B. All claims for warranty service shall be submitted to MEPPI at the address listed in 2A above. Claims shall be made in writing or by telephone or fax subsequently confirmed in writing and will be considered received on the day notice is actually received by MEPPI.

C. If MEPPI determines that the repair is covered under this Limited Warranty, MEPPI shall repair or replace the defective part at no charge to the customer. MEPPI shall advise the customer if it determines that the requested repair is not covered under this Limited Warranty. Upon customer's request, MEPPI shall perform the repair at the customer's cost and expense. Repair charges shall be based on service parts price and the prevailing field service-call charges in effect at the time of repair. All repair invoices shall be paid within 30 days of invoice date. Past due invoices shall bear interest at the rate of 1.5% per month, but not in excess of the maximum lawful rate, until paid in full. Customers are responsible for all costs and expenses, including attorneys' fees, incurred by MEPPI in collecting any past due invoices.

3. EXTENDED WARRANTY: The original end user may purchase an extension of this limited warranty for up to 36 months after the expiration of the original limited warranty. Extensions are available on new Product only (not previously placed in service) located at the site of the original end user; provided the Product has been continuously covered either by the original warranty or an extended warranty. Contact MEPPI for details prior to the expiration of your initial or extended limited warranty.

4. MODIFICATIONS: MEPPI may modify the procedures and charges described in this Limited Warranty at any time without prior notice to customer. No modification, waiver or alteration of any of the provisions of this Limited Warranty by customer shall be binding upon MEPPI, unless made in writing and signed by a duly authorized officer of MEPPI.

5. GOVERNING LAW: This Limited Warranty shall be subject to and construed solely in accordance with the laws of the United States of American and the State of Illinois, without regard to its principles of conflicts of law. The parties specifically disclaim the applicability of the United Nations Convention on the International Sale of Goods, as amended, and the United Nations Convention on the Limitation Period in the International Sale of Goods, as amended, to this Limited Warranty or any transaction or dispute arising hereunder.